




RFXtrx

USB RF transceiver

User Guide

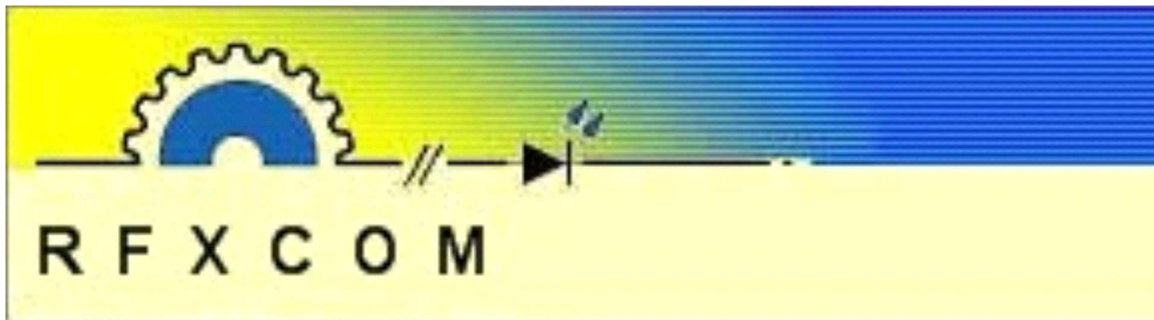

www.rfxcom.com

1. Table of Contents

1.	Table of Contents	2
2.	RFXtrx general information.....	4
2.1.	RFXtrx315 supported protocols	4
2.1.1.	RFXtrx315 configured for 310MHz	4
2.1.2.	RFXtrx315 configured for 315MHz	4
2.1.3.	RFXtrx868X and RFXtrx868XL supported protocols.....	4
2.2.	RFXrec433, RFXtrx433, RFXtrx433E, RFXtrx433XL supported protocols.....	5
2.2.1.	By function	5
2.2.2.	Alphabetic list.....	11
2.3.	undec on	19
2.4.	Sensitivity influenced by enabled protocols	20
2.5.	RF range reduction.....	21
2.6.	Home Automation software	21
2.7.	Dimensions	21
2.8.	Electrical	21
2.9.	Environmental conditions	21
3.	Install the USB driver.....	22
4.	Run RFXflash on Linux under Mono.....	22
5.	RFXmngr test program.....	23
5.1.	Receiver.....	24
5.2.	Transmitter	25
6.	Flash update of the RFXtrx.....	26
6.1.	Update firmware in the RFXtrx	26
6.2.	Update firmware in the RFXtrx step by step	27
7.	RFXtrx433 special device codes	29
7.1.	Remote commands	29
7.1.1.	X10 RF Remote	29
7.1.2.	ATI Remote Wonder.....	30
7.1.3.	ATI Remote Wonder Plus.....	31
7.1.4.	Medion Remote.....	32
7.2.	Harrison address conversion to switch settings.....	33
7.3.	Flamingo, AB400, IMPULS, Sartano, Brennenstuhl, SilverCrest 91089, Cranenbroek switch settings	34
7.4.	Energenie 5-gang 429.950	35
7.5.	Phenix, IDK YC-4000S switch settings.....	36
7.6.	HE105 switch settings	37
7.7.	HQ COCO-20.....	38
7.8.	MDREMOTE V106, V107.....	39
7.9.	MDREMOTE V108, EKAB-10KRF	39
7.10.	Aoke relay.....	39
7.11.	SEAV TXS4.....	40
7.12.	How to find the dx.com RGB LED strip driver ID	40
7.13.	How to find the dx.com RGB LED strip driver ID (rev. 2).....	40
7.14.	How to find the Eurodomest ID	40
7.15.	How to find the Screenline ID.....	41
7.16.	How to find the Avantek remote ID.....	41
8.	Blyss commands	42
9.	Somfy RTS.....	43
9.1.	How to move RFY devices to another RFXtrx433E or RFXtrx433XL	44
10.	BlindsT6.....	45
10.1.	Dooya DT52E, DT82TV, DT82TN.....	45
11.	ID switches Casafan and Lucci Air fans	45
12.	Transmit Funkbus (Insta, Gira, Jung, Berker)	46
13.	Transmit undecoded ARC commands.	47
14.	MCZ pellet stove.....	48
15.	Lighting4 devices	49
15.1.	Proluxx projection screen.....	49

15.2.	Kingpin (KP100) projection screen.....	49
15.3.	Mercury remote control mains sockets.....	49
15.4.	Conrad 034911 sockets.....	49
15.5.	Sonoff.....	50
15.6.	PT2262 and EV1527 oscillator resistors accepted.....	50
16.	Receive and Transmit RAW data.....	51
17.	RFXtrx433XL - P1 smart meter connection.....	53
17.1.	DIY P1 connection for RFXtrx433XL batch 3618 and 4018.....	54
17.2.	DIY P1 connection for RFXtrx433XL batch 4918 and later.....	54
17.3.	P1 option PCB Type 1 for RFXtrx433XL batch 3618 and 4018.....	55
17.4.	P1 option PCB Type 2 for RFXtrx433XL batch 4918 and later.....	56
18.	RFXtrx433XL - Teleinfo connection.....	57
18.1.	Teleinfo option PCB for RFXtrx433XL batch 4918 and later.....	57
19.	RFXtrx433XL - Connection points for a serial interface.....	58
20.	Recover from interrupted or wrong flash.....	59
21.	FAQ.....	61
21.1.	Receive has stopped suddenly but transmit works.....	61
21.2.	Can I increase the receive/transmit range of the RFXtrx?.....	61
21.3.	The RFXtrx USB connection disconnects sometimes.....	61
21.4.	I have a 433.92MHz sensor/remote but this device is not received.....	61
21.5.	The wall plug is switched by the remote, the remote is received but the RFXtrx does not switch the module.....	61
22.	EC Declaration of Conformity.....	62
23.	Warning:.....	63
24.	License.....	63
25.	Copyright notice.....	63
26.	Revision history.....	64

2. RFXtrx general information

The RFXtrx transceivers and RFXrec receivers are communicating over an USB port with the Home Automation application. The RFXtrx/rec is powered by the USB port.

At startup the RFXtrx enters for 2 seconds the boot loader (red LED is on) and after this it starts the receive/transmit firmware. If valid (decode-able) packets are received the yellow LED will blink.

The RFXtrx315 and the RFXrec433 are mainly for use in the US. The RFXtrx315 can receive US X10 lighting and security sensors **or** US Visonic PowerCode sensors at 315MHz.

The RFXrec433 can receive weather sensors of different brands at 433.92MHz.

The RFXtrx433 is a transceiver (transmitter+receiver) and can receive and control a large number of sensors and other devices.

The RFXtrx433E is an extended RFXtrx433 transceiver with additional memory and non-volatile memory for Somfy RTS codes and configuration settings.

The RFXtrx433XL is the next generation version with double size memory and a serial connection for the Dutch and French smart meters.

2.1. RFXtrx315 supported protocols

2.1.1. RFXtrx315 configured for 310MHz

Protocol	Protocol	receive	transmit
US X10 lighting	X10	Y	Y
US X10 security	X10	Y	Y

2.1.2. RFXtrx315 configured for 315MHz

Protocol	Protocol	receive	transmit
Aoke relay	Lighting5	-	Y
PT2262, EV1527 and compatibles	Lighting4	Y	Y
Keeloq (unencrypted part only)	Keeloq	Y	-
Visonic CodeSecure (unencrypted part only)	Visonic	Y	-
Visonic PowerCode	Visonic	Y	Y

2.1.3. RFXtrx868X and RFXtrx868XL supported protocols

Protocol	Protocol	receive	transmit
Alecto ACH2010	Alecto ACH2010	Y	-
Alecto WS5500, FineOffset WH2900, Ventus W830	Alecto WS5500	Y	-
Davis Vantage Vue EU *	Davis EU	Y	-
Edisio	Edisio	Y	Y
FS20	FS20	Y	Y
Itho CVE RFT	Itho CVE RFT	-	Y
Keeloq (unencrypted part only)	Keeloq	Y	Y
Visonic CodeSecure (unencrypted part only)	Visonic	Y	-
Visonic PowerCode	Visonic	Y	-

* based on information available at: wxforum.net – “Implementing a Si1000 based wireless receiver for Davis ISS data” and madsientistlabs.blogspot.com

Important: it is only possible to enable one protocol for receive in the RFXtrx868X and RFXtrx868XL because of the used transmission techniques at 868MHz.

2.2. RFXrec433, RFXtrx433, RFXtrx433E, RFXtrx433XL supported protocols

2.2.1. By function

Curtains, shades, projection screen, awning, gate openers
A-OK blind motors (RF01,AC114,AC123,AC127,AC129 controlled) - http://www.motorisationplus.com/
Aldomo - http://www.aldomo.de/
ASA ETR blind motors - http://www.asa-mingardi.org/en/home.php
ASP blind motors - http://www.asp-distribution.com/site%20volet/voletrenovation.aspx
BOFU EYB25 EY1612 blind motors - http://www.bofumotor.com/
BTX blind motors, remote, part# 490.2076 – http://www.btxinc.com
Brel blind motors - http://www.brel-motors.nl/webshop/motoren/
Bi-Directional is not supported!
Chamberlain CS4330CN http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336
Cherubini
Confexx CNF24-2435
Dolat DLM-1 controlled motors - http://www.dolat.com.cn/product1.asp?id=538
Dooya blind motors, remotes tested: DC305,DC306,DC307,DC313,DC1602,DC1650,DC1651,DC2700
Bi-Directional is not supported!
Ematronic - http://www.ematronic.com/moteurs-volet-roulant/
ESMO blind motors
Faher
Forest blind/curtain motors - http://www.forestgroup.nl/index_nl.html
Gaposa ER motors 434.15MHz - http://www.gaposa.it/eng/products/residential-motors
Harrison curtain – http://www.harrison.nl/home2.htm
Hasta blind motors - http://www.hasta.se/
inblindz - https://www.inblindz.nl/
JVS screens - http://www.screen-discount.nl/
Kimex projection screen - https://www.kimexinternational.com/A-9162-ecran-de-projection-electrique-encastrable-3-00-x-1-69m-format-16-9.aspx
Kingpin KP100 projection screen
Louvolite one touch motorised blinds
Luxaflex (RFXtrx433E and RFXtrx433XL) - http://www.luxaflex.se/produkter/luxaflex/rullgardiner/
Media Mount Projector screen
Motiva blinds, remote BY-305
Motolux - http://www.motolux.com.au/
Motostar blinds
Nobily rolladenmotor http://www.nobily.de/rolladenmotor/funk-elektronisch/40mm-achtkantwelle/170/nobily-rolladenmotor-pre4?c=5
Omnia Go blinds https://omniablinds.com/
Outlook Motion Blinds - https://www.spotlightstores.com/curtains-blinds/indoor-blinds/roller-blinds/project-outlook-motion-motorised-roller-blind/p/BP80360543
Proluxx projection screen
Quotidom - http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html (not the Solutio version)
RAEX blind motor (YR1326 controlled)
RohrMotor24 RMF blind motors - http://www.rohrmotor24.eu/rohrmotor24
RollerTrol blind motors - http://rollertrol.com/
Screenline motors - http://www.screenline.cz/en/
Silverline Premium - http://www.aluparts.nl
Simu Hz (not BHz!) (RFXtrx433E and RFXtrx433XL only) – http://www.simu.com/
Siro - https://shop.siro-antrieb.de/shop-kategorie/elektrische-antriebe-fuer-innensonnenschutz/
Somfy (RFXtrx433E and RFXtrx433XL only) – http://www.somfy.co.uk/
Sunflower brand KT52E motorized Curtain track,Single track, DOOYA motor https://nl.aliexpress.com/item/motorized-Curtain-track-1m-3-3m-wide-Single-track-DOOYA-motor-the-top-motor-brand-in/1939622604.html
Sunpery blind motors
YOODA blind motors – http://www.sukcesgroup.pl

Temperature, humidity, weather sensors	
Alecto – WSD10, WS1200, WS1700, WS3500, WS4500	
Auriol – H13726	
Ambient Weather - F007TH	
Banggood – SKU174397 http://www.banggood.com/433MHz-Wireless-Weather-Station-Digital-Thermometer-Humidity-Sensor-p-965559.html	
Blyss 630467	
Bresser Temeo Hygro	
Cresta	
Digimax	
Digoo DG-R8H DG-R8S	
FineOffset WH1285	
Froggit - F007TH	
Hama – EWS1500	
Hideki weather sensors	
Honeywell – TF-ATS34C	
Inovalley SM80 with plant probes - http://www.inovalley.com/detail.php?item_id=289	
La Crosse	
Lexibook – SM883	
Marquant 943134	
Maverick ET-732, ET-733 BBQ/Smoke temperature	
Meade – TS33F-M, TS34C-M http://www.meade.com/products/weatherstations/sensors.html	
Meteoscan – W155, W160	
Nexa NBA-001	
NEXUS – I008T	
mi.sol WH2 http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899	
Opus XT300 /Imagintronix Soil sensor http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Plants_Fertiliser_CV&hash=item3a8778244b	
Oregon Scientific / Huger	
Pearl NC-7159 http://www.pearl.de/a-NC7159-3041.shtml	
Prego P-8426 http://www.sunmarket.fi/tuote.asp?TID=11990	
Proove –TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501	
RFXSensor	
RUBiCSON – stektermometer 48659, 48695 –pool sensor p48019	
Sunvic TLX1206	
Sunvic TLX7506	
TechnoLine/Proficell http://www.elv.de/output/controller.aspx?cid=74&detail=10&detail2=27621 - TX95-TH, WS9180-TX104	
Telldus Thermo/Hygro sensors 313159 and 313160 https://www.lohelectronics.se/hemautomation/433mhz/sensorer-1110/smart-inne-och-utetermometer-med-hygrometer-10396	
TFA	
UPM/Esic (very short receiving range)	
Ventus – WS155	
Viking	
WT0122 pool thermometer	
Xiron –EN6	

Door/window, smoke and other security sensors
Aidebao security
Alecto – SA30, SA33, SA41 smoke detector
AliExpress sensors with EV1572 or PT2262 (PT2262 is preferred)
Atlantic security
Chacon KD101 smoke detector
Chuang security
Digoo - https://www.aliexpress.com/item/DIGOO-433MHz-New-Door-Window-Alarm-Sensor-for-HOSA-HAMA-Smart-Home-Security-System-Suit-Kit/32957905665.html
Eminent security
Flamingo KD101 smoke detector FA20RF, FA21RF, FA22RF
Focus
Housegard Origo smoke detector
Kerui security https://www.aliexpress.com/item/433-MHz-Wireless-Door-Windows-Sensors-for-KERUI-Alarm-System-Magnetic-Door-Sensor-Door-Open-reminder/32590916896.html
Meiantech security
NEXA KD101/LM101LC smoke detector
Renkforce RF101 smoke detector
SAS SA-200 KD101 smoke detector
Smartwares RM174RF, RM175RF smoke detector
Oregon MSR939 https://www.redealer.de/multimedia/home-living/wetterstationen/bewegungssensor-msr939/a-200667/
Visonic CodeSecure
Visonic PowerCode
X10 security

Appliance modules, dimmers, relays, LED controllers
ANSLUT (learning mode)
Aoke relay http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html
Avantek
ByeByeStandBy
Blyss lighting – http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html
Brennenstuhl RC2044, RCS2044N
Chacon – http://www.chacon.be/
CoCo – http://www.coco-technology.com/en/home/
Conrad RSL2 – http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOESCHALTER-RSLR2
Cotech Smarthome
Cranenbroek
DI.O – http://www.di-o.be/
DomiaLite
Ebode
ELRO AB400/AB600 – http://www.elro.eu/en/products/cat/home-automation/home-control1
Energenie ENER010 – 429.935, 5-gang 429.950 - https://energenie4u.co.uk/
Etekcity – http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx
Eurodomest NL – Action
Everflourish EMW100
Flamingo
Flamingo FA500D FA500DSS
Flamingo Smartwares SF501
FunkBus (Gira, Jung, Insta, Berker)
Home Confort – http://www.home-confort.net/en
HomeEasy EU – http://www.elro.eu/en/products/cat/home-automation/
HomeEasy UK (including HE105 relay) – http://www.homeeasy.eu/
HQ COCO-20
Ikea Koppla

Impuls – NL – Action
Intertechno – http://www.intertechno.at/
Kambrook RF3672 – http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054
KlikAanKlikUit – http://www.klikaanklikuit.nl/home/
Legrand CAD radio – http://docdif.fr.grpleg.com/general/legrand-fr/NP-FT-GT/FA181DFR.pdf
LightwaveRF – http://www.lightwaverf.co.uk/
Livolo - http://www.livolo-france.com/fr/ http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html
Maplin http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka (use Lighting1 – COCO GDR2)
MDremote LED dimmer V106, V107, V108, EKAB-10KRF - www.ultraleds.co.uk - http://www.ledstripkoning.nl/accessoires/dimmers-wit/draadloze-dimmer-10-knops-rl/
Mercury appliance modules – http://mercury.avsl.com/product?range=ME5124
NEXA – http://www.nexa.se/
ORNO
OTIO
Phenix
Philips SBC SP370 series
Profile Qnect 423000040,423000042
PROmax
Proove - http://proove.se/
Quigg
RGB LED strip driver dx.com - http://www.dx.com/ order nbr: 130913 (new TRC02 not supported) , 67412
RisingSun
Sartano
Siemens (UK)
SilverCrest 91089, 60494, 284705
Unitec 48110 EIM 826
Waveman
X10 RTS10 / RFS10
X10 lighting
Xdom

Remotes
ATI Remote Wonder
ATI Remote Wonder Plus
ATI Remote Wonder II
SEAV TXS4
X10 PC Remote

Chimes
1byOne Easy Chime
Alfawise - https://www.gearbest.com/ip-cameras/pp_1693842.html?wid=1214279
Byron SX and BY chime - http://www.chbyron.eu/Byron/ByronSXRange/68/89/
Byron MP001
Chacon
dBell - https://www.webstore4ipcameras.nl/dbell_DB-HD-LIVE-B-W
Envivo – ENV1348
HomeEasy
KlikAanKlikUit
Monaco - https://www.airam.fi/en/product/v8305-2988/7020500/monaco-wireless-doorbell-230v/140/1
Profiles PAC-326R Belcanto
SelectPlus200689101 & SelectPlus200689103 (Action NL)

Power, gas water metering
Cartelectronic TIC, Encoder, Linky - https://www.cartelectronic.fr/index.php?id_product=124&controller=product
cent-a-meter
Electrisave
OTIO EHS5050
OWL CM113, CM180, CM119, CM160, CM180, CM180i - http://www.theowl.com/
Revolt NC5461 - http://www.pearl.de/a-NC5462-5452.shtml
RFXMeter

Specials
1byone Wireless Home Security Driveway Alarm http://www.1byone.co.uk/Home-Security/Alarms/O00QH-0511
CasaFan
DEA receivers http://www.deasystem.com/en/accessory/7/receivers (unencrypted only)
Hunter fan
Lucci Air Fan - https://www.beaconlighting-europe.com/product-category/lucci-air-deckenventilatoren/
MCZ pellet stove
Mertik Maxitrol – Fire Place controllers
Novy extractor hood
Oregon Scientific Body weight scales – BWR101, BWR102, GR101
Prego P-8426 – sauna temperature sensor http://www.sunmarket.fi/tuote.asp?TID=11990
Smartwares radiator valve http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html
Siemens SF01 - LF959RA50/LF259RB50/LF959RB50 extractor hood
Wave Design extractor hood
X10 Ninja/Robocam – camera motor

2.2.2. Alphabetic list

Important notes:

- Ext, Ext2, Pro1 and Pro2 firmware can only be used in the RFXtrx433E!
- ProXL firmware can only be used in the RFXtrx433XL!
- RFXrec firmware is equal to RFXtrx433 – Type1 firmware without the transmit functions.
- Protocol enabling is only necessary for receive. Transmit protocols are always enabled.
- R = Receive only
- T = Transmit only
- RT = Receive & Transmit

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1	Protocol
1byone Driveway Alarm http://www.1byone.co.uk/Home-Security/Alarms/O00QH-0511		RT	RT	RT	RT	RT	RT	ByronSX
1byone Easy Chime		RT	RT	RT	RT	RT	RT	ByronSX
A-OK blind motors RF01 http://www.motorisationplus.com/	RT	RT		RT	RT	RT	RT	BlindsT2
A-OK blind motors AC114,AC123,AC127,AC129, ZC11 - http://www.motorisationplus.com/	RT	RT		RT	RT	RT	RT	BlindsT3
Aidebao security	RT	RT	RT	RT	R	R	R	Meiantech
Aldomo - http://www.aldomo.de/	T	T	T	T	RT	RT	RT	BlindsT6
Alecto – SA30, SA33, SA41 smoke detector	RT		RT				RT	Oregon
Alecto – WS1100 (needs correction -40°C)	R	R	R	R	R	R	R	FineOffset
Alecto – WS1200	R*	R*	R*	R*	R	R	R	*LaCrosse Pro = FineOffset
Alecto – WS1700 and compatibles, WS3500, WS4500			R	R	R	R	R	Rubicson
Alecto – WSD10				R	R	R	R	Rubicson
Alfawise - https://www.gearbest.com/ip-cameras/pp_1693842.html?wid=1214279							RT	ByronSX
Ambient Weather F007TH, WS14 pool sensor				R	R	R	R	Oregon
ANSLUT (learning mode)	RT	RT	RT	RT	RT		RT	AC
Aoke relay http://www.aliexpress.com/store/product/who-se-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html	RT	RT	RT	RT	RT		RT	Lighting5 Aoke or Lighting1 ARC
ASA ETR blind motors - http://www.asa-mingardi.org/en/home.php			T	T	T	T	T	RFY
ASP blind motors http://www.asp-distribution.com/site%20volet/voletrenovation.aspx	RT	RT		RT	RT	RT	RT	BlindsT11
ATI Remote Wonder	R							ATI
ATI Remote Wonder Plus	R							ATI
ATI Remote Wonder II (only available in hardware version 1.0)	R							ATI
Atlantic security	RT	RT	RT	RT	RT	RT	RT	Meiantech
Auriol H13726			R	R	R	R	R	Rubicson
Auriol Z31055B-TX				R	R	R	R	Rubicson
Avantek * receive Lighting4			RT	RT	RT	RT	RT	Lighting5 *Lighting4
Banggood – SKU174397			R	R	R	R	R	Rubicson
Banggood DANIU			R					Rubicson
Blyss lighting http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html	RT	RT	RT		RT		RT	AE
Blyss temperature/humidity 630467	R	R	R				R	AE

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
BOFU EYB25 EY1612 blind motors - http://www.bofumotor.com/ * = receive in Type2 only used to get the remote ID.	T	RT	T	T	T		RT		BlindsT0
Brennenstuhl RCS2044N	RT	RT	RT	RT	RT	RT	RT		Lighting4
Brennenstuhl RC2044				RT	RT		RT		Lighting4 + AC Pro = AC
Brel blind motors http://www.brel-motors.nl/webshop/motoren/ Bi-Directional is not supported!	T	T	T	T	RT	RT	RT		BlindsT6
Bresser Temeo Hygro							R		Rubicson
BTX blind motors, remote, part# 490.2076 http://www.btxinc.com		T					T		BlindsT9
ByeByeStandBy	RT	RT	RT				RT		ARC
Byron BY chime					RT		RT		ByronSX
Byron SX chime http://www.chbyron.eu/Byron/ByronSXRange/68/89/	RT	RT	RT	RT	RT	RT	RT		ByronSX
Byron MP001 chime			T	T			T		Chime Byron MP001
Cartealectronic TIC, Encoder, Linky https://www.cartealectronic.fr/index.php?id_product=124&controller=product		R		R	R	R	R		ATI/cartealectronic
Casafan					T	T	T		Fan Casafan
CasaFan Eco Aviatos RH787T					T	T	T		Fan LucciAir DCII
cent-a-meter	R	R	R						Oregon
Chacon (learning mode) http://www.chacon.be/	RT	RT	RT	RT	RT	RT	RT		AC
Chacon (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
Chacon EMW200	T	T	T				T		Lighting1 EMW200
Chacon 54660 (equal COCO GDR2)	T	T	T	T			T		Lighting1 COCO GDR2
Chacon KD101 smoke detector	RT	RT	RT	RT	RT	RT	RT		always on
Chamberlain CS4330CN http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336			T				T		BlindsT8
Cherubini							RT		BlindsT18 (receive =BlindsTx + Keeloq)
Chuango * decoded as X10	R	R	R	R*	R*	R*	R*		Lighting4
CoCo (learning mode) http://www.coco-technology.com/en/home/	RT	RT	RT	RT	RT	RT	RT		AC
CoCo (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
CoCo GDR2 (equal Chacon 54660)	T	T	T	T			T		Lighting1 COCO GDR2
Confexx CNF24-2435				T			T		BlindsT12
Conrad RSL2 http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOESCHALTER-RSLR2	RT	RT		RT	RT		RT		RSL
Conrad RSL sensors		R					R		RSL
Conrad RSL2 motion/door-window sensors		R					R		RSL
Cotech Smarthome				RT	RT		RT		Lighting4 + AC
Cotech weather sensor https://www.clasohlson.com/no/Ekstra-temperaturgiver-hygrometer/36-6726				R	R		R		Rubicson

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
Cranenbroek	T	T	T	T			T		Lighting1 Impuls
Cresta - TX-320, TS34C, anemometer, UV sensor, rain sensor	R	R	R	R	R	R	R		Hideki
Cuveo https://shop-m-e.de/produkte/cuveo-funk-system/?p=1						RT	RT		AE
dBell - https://www.webstore4ipcameras.nl/dbell_DB-HD-LIVE-B							RT		ByronSX
DEA receivers (unencrypted) http://www.deasystem.com/en/accessory/7/receivers			RT		RT	RT	RT		KeeLoq
Digimax	R	R	R	R	R		R		X10
Digoo DG-R8H, DG-R8S https://www.banggood.com/Digoo-DG-R8H-433MHz-Wireless-Digital-Hygrometer-Thermometer-Weather-Station-Sensor-for-TH11300-8380-p-1178108.html				R	R	R	R		Rubicson
Digoo https://www.aliexpress.com/item/DIGOO-433MHz-New-Door-Window-Alarm-Sensor-for-HOSA-HAMA-Smart-Home-Security-System-Suit-Kit/32957905665.html							R		Lighting4 + Meiantech
DI.O (learning mode) http://www.di-o.be/	RT	RT	RT	RT	RT	RT	RT		AC
DI.O (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
Dolat DLM-1 controlled motors http://www.dolat.com.cn/product1.asp?id=538		T					T		BlindsT10
DomiaLite (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
Dooya blind motors, emulate remotes: DC305, DC306, DC307, DC313, DC1602, DC1650, DC1651, DC2700 Bi-Directional is not supported!	T	T	T	T	RT	RT	RT		BlindsT6
Ebode	RT	RT	RT	RT	RT	RT	RT		X10
Electrisave	R	R	R		R	R	R		Oregon
ELRO AB400 http://www.elro.eu/en/products/cat/home-automation/home-control1	RT	RT	RT	RT	RT		RT		Lighting4
ELRO AB600	RT	RT	RT	RT	RT		RT		ARC
Ematronic RF01 http://www.ematronic.com/moteurs-volet-roulant/	RT	RT		RT	RT	RT	RT		BlindsT2
Ematronic AC114, AC123 http://www.ematronic.com/moteurs-volet-roulant/	RT	RT		RT	RT	RT	RT		BlindsT3
Eminent * decoded as X10 in ext firmware	RT	RT	RT	RT	RT	RT	RT		Lighting4
Energenie https://energenie4u.co.uk/ - ENER010 – 429.935, 5-gang 429.950	T	T	T				T		Lighting1 Energenie Energenie5
Envivo – Chime ENV1348			T				RT		Chime + Lighting4
ESMO blind motors	T	T	T	T	RT	RT	RT		BlindsT6
Etekcitcity – http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx	T	T	T				T		Lighting1 Energenie5
Eurodomest (NL – Action) * ARC only	T*	T	T*	T*			T		Lighting1 - ARC Or Lighting5 Eurodomest
Everflourish EMW100	T	T	T				T		Lighting5 EMW100
Falmec fan						T	T		Fan Falmec

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1	Protocol
Faro Barcelona fan – http://www.faro.es/			T		T	T	T	Fan LucciAir
Faro Barcelona DC fan For example : Airfusion Climate II 50 DC					T	T	T	Fan LucciAir DC
Faro Barcelona DCII fan For example : Airfusion Climate II 50 DC					T	T	T	Fan LucciAir DCII
Faher blinds motor	T	T	T	T	RT	RT	RT	BlindsT6
FineOffset – WH1285 (needs correction -40°C)	R	R	R	R	R	R	R	FineOffset
Flamingo	RT	RT	RT	RT	RT	RT	RT	Lighting4
Flamingo FA500D FA500DSS				T	T		T	IT
Flamingo KD101 smoke detector FA20RF, FA21RF, FA22RF	RT	RT	RT	RT	RT	RT	RT	always on
Flamingo Smartwares SF501	R	R	R	R	R	R	R	AC
Focus	RT	RT	RT	RT	RT	RT	RT	Meiantech
Forest blind/curtain motors http://www.forestgroup.nl/index_nl.html	T	T	T	T			T	BlindsT7
Froggit - F007TH				R	R	R	R	Oregon
FT1211R fan controller					T	T	T	Fan FT1211R
FunkBus ID: 3F CC (Gira, Jung, Insta, Berker)						T	T	Funkbus
Gaposa ER motors 434.15MHz							RT	BlindsT17
HAMA EWS1500			R	R	R	R	R	Rubicson
Harrison curtain http://www.harrison.nl/home2.htm	T	T	T	T	T		T	Curtain Harrison
Hasta new blind motors http://www.hasta.se/ * = receive in Type2 only used to get the remote ID.	T	RT	T	T	T		RT	BlindsT0
Hasta old blind motors	RT	RT					RT	BlindsT1
Hideki weather sensors	R	R	R	R	R	R	R	Hideki
Home Confort lighting http://www.home-confort.net/en			RT				RT	HomeConfort
HomeEasy EU (learning mode) http://www.elro.eu/en/products/cat/home-automation/	RT	RT	RT	RT	RT	RT	RT	HE EU
HomeEasy UK – HE105 - http://www.homeeasy.eu/	T	T	T	T			T	Thermostat2 HE105
HomeEasy UK (learning mode)	RT	RT	RT	RT	RT	RT	RT	AC
HomeEasy UK (with address code wheels)	RT	RT	RT	RT	RT		RT	ARC
Honeywell - TF-ATS34C	R	R	R	R	R	R	R	Hideki
Housegard Origo smoke detector				RT	RT		RT	ARC
HQ COCO-20			T	T			T	Lighting1 HQ COCO20
Hualite blinds					T	T	T	BlindsT14
Hunter fan https://www.hunterfan.com/						RT	RT	Fan
Ikea Koppla	T							Lighting3
Impuls (NL – Action)	T	T	T	T			T	Lighting1 Impuls
inblindz - https://www.inblindz.nl/				T			T	BlindsT13
Inovalley SM80 with plant probes http://www.inovalley.com/detail.php?item_id=289			R	R	R	R	R	Rubicson
Intertechno (learning mode) http://www.intertechno.at/	RT	RT	RT	RT	RT	RT	RT	AC
Intertechno (with address code wheels)	RT	RT	RT	RT	RT		RT	ARC
JVS screens http://www.screen-discount.nl/	T	T	T	T	RT	RT	RT	BlindsT6

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
Kambrook RF3672 – http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054		T	T				T		Lighting2 Kambrook
Keeloq (unencrypted)			RT		RT	RT	RT		KeeLoq
Kerui security * decoded as X10 in Ext2 and Pro firmware https://www.aliexpress.com/item/433-MHz-Wireless-Door-Windows-Sensors-for-KERUI-Alarm-System-Magnetic-Door-Sensor-Door-Open-reminder/32590916896.html	R	R	R	R*	R*	R*	R*		Lighting4 + X10*
Kerui siren xx xx x8 = on, xx xx x2 = off	T	T	T	T	T	T	T		Lighting4
Kimex projection screen https://www.kimexinternational.com/A-9162-ecran-de-projection-electrique-encastable-3-00-x-1-69m-format-16-9.aspx	RT	RT		RT	RT	RT	RT		BlindsT3
Kingpin KP100 projection screen	T	T	T	T	T	T	T		Lighting4
KlikAanKlikUit (learning mode) http://www.klikaanklikuit.nl/home/	RT	RT	RT	RT	RT	RT	RT		AC
KlikAanKlikUit (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
La Crosse - TX2, TX3, TX3P, TX4, TX7, TX17, WS2300	R	R	R	R	R	R	R		LaCrosse
Legrand CAD radio			T				RT		Lighting5 LeGrand CAD
Lexibook - SM883	R	R	R	R	R	R	R		Hideki
LightwaveRF - http://www.lightwaverf.co.uk/	RT	RT	RT	RT	RT		RT		AD
Livolo - http://www.livolonederland.nl/ - http://www.livolo-France.com/fr/ - http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html	T	T	T	T	T		RT		Lighting5 Livolo
Louvolite one touch motorised blinds * = receive in Type2 only used to get the remote ID.	T	RT	T	T	T		RT		BlindsT0
Lucci Air fan https://www.beaconlighting-europe.com/product-category/lucci-air-deckenventilatoren/			T		T	T	T		Fan LucciAir
Lucci Air DC fan For example : Airfusion Climate II 50 DC					T	T	T		Fan LucciAir DC
Lucci Air DCII fan For example : Airfusion Climate II 50 DC					T	T	T		Fan LucciAir DCII
Luxaflex – http://www.luxaflex.se/produkter/luxaflex/rullgardiner/			T	T	T	T	T		RFY
Maplin http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka	T	T	T	T			T		Lighting1 COCO GDR2
Marquant 943134		R					R		X10
Maverick ET-732/733 BBQ/Smoke temperature	R	R	R	R	R		R		Hideki
MCZ pellet stove		RT	T				RT		Thermostat4
MDremote LED dimmer v106 www.ultraleds.co.uk	T	T	T	T					Lighting5 MDRemote V106
MDremote LED dimmer v107 www.ultraleds.co.uk	T	T	T	T					Lighting5 MDRemote V107
MDremote LED dimmer v108, EKAB-10KRF http://www.ledstripkoning.nl/accessoires/dimmers-wit/draadloze-dimmer-10-knops-rf/	T	T	T	T					Lighting5 MDRemote V108

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
Meade – TS33F-M, TS34C-M http://www.meade.com/products/weatherstations/sensors.html	R	R	R	R	R	R	R		Hideki
Media Mount Projector screen		T							Lighting4
Meiantech security	RT	RT	RT	RT	RT	RT	RT		Meiantech
Mercury appliance modules http://mercury.avsl.com/product?range=ME5124	T	T	T	T			T		Lighting1 Energenie5
Mertik Maxitrol Fire Place controllers - G6R-H4T1, G6R-H4T5, G6R-H4TD, G6R-H4T16, G6R-H4TB, G6R-H4T21-Z22, G6R-H4D15	RT	RT	RT	RT	RT		RT		Mertik
Mertik Maxitrol Fire Place controller - G6R-H3T1							RT		Mertik
Mertik Maxitrol Fire Place controller - G6R-H4S	T	T	T	T	T		T		Mertik
Meteoscan W155,W160			R	R	R	R	R		Rubicson
Monaco - https://www.airam.fi/en/product/v8305-2988/7020500/monaco-wireless-doorbell-230v/140/1			T				RT		Chime + Lighting4
Motiva blinds, remote BY-305 * = receive in Type2 only used to get the remote ID.	T	RT	T	T	T		RT		BlindsT0
Motorlux blinds motor	T	T		T	T	T	T		BlindsT3
Motostar blinds						T	T		BlindsT15
mi.sol WH2 http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899	R	R	R	R	R	R	R		FineOffset
NEXA (learning mode) - http://www.nexa.se/	RT	RT	RT	RT	RT	RT	RT		AC
NEXA (with address code wheels)	RT	RT	RT	RT	RT		RT		ARC
NEXA KD101/LM101LC smoke detector	RT	RT	RT	RT	RT	RT	RT		always on
Nexa NBA-001 temperature sensor	R	R	R	R	R	R	R		Hideki
NEXUS - I008T	R	R	R	R	R	R	R		Hideki
Nobily rolladenmotor http://www.nobily.de/rolladenmotor/funk-elektronisch/40mm-achtkantwelle/170/nobily-rolladenmotor-pre4?c=5	T	T	T	T	RT	RT	RT		BlindsT6
Novy extractor hood https://www.novynederland.nl/						T	RT		Fan
Oase Inscenio FM Master						T	T		Lighting1 Oase
Omnia Go blinds https://omniablinds.com/	T	T	T	T	RT	RT	RT		BlindsT6
Opus XT300 /Imagintronix Soil sensor http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&hash=item3a8778244b	R*	R*	R*	R*	R	R	R		Imagintronix* Pro = Fineoffset
ORNO	RT	RT	RT	RT	RT	RT	RT		AC
Oregon Scientific / Huger BBQ and weather sensors - AW129, AW131, BTHGN129, BTHR918, BTHR918N, BTHR968, EW109, PCR800, RGR126, RGR682, RGR918, RGR928,	R	R	R	R	R	R	R		Oregon

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
RTGN318, RTGR328N, RTGR328N, RTGR368N, RTGR383, RTHN318, STR918, STR928, THGN800, THGN801, THC138, THC238, THC268, THGN122NX, THGN123N, THGN132ES, THGN132N, THGN500, THGR122(N/NX), THGR228(N/NF), THGR238, THGR268, THGR328N, THGR810, THGR918, THGR928, THGRN228NX, THN122N, THN129, THN132N, THR128, THR138, THR288(N/NF), THRN122N, THWR288A, THWR800, UV138, UVN128, UVN800, UVR128, WGR800, WGR918, WTGR800, WTGR800									
Oregon Scientific weighting scales - BWR101, BWR102, GR101 US BWR101, BWR102 in RFXrec	R		R	R			R		Oregon
Oregon MSR939 https://www.redealer.de/multimedia/home-living/wetterstationen/bewegungssensor-msr939/a-200667/			R				R		Oregon
OTIO EHS5050		R					R		RSL
OTIO Lighting	RT	RT		RT	RT		RT		RSL
Outlook Motion Blinds https://www.spotlightstores.com/curtains-blinds/indoor-blinds/roller-blinds/project-outlook-motion-motorised-roller-blind/p/BP80360543		RT			RT	RT	RT		BlindsT4
OWL – CM113	R	R	R				R		Oregon
OWL - CM119, CM160, CM180, CM180i http://www.theowl.com/	R	R	R	R	R	R	R		Oregon
Pearl NC-7159 http://www.pearl.de/a-NC7159-3041.shtml			R	R	R	R	R		Rubicson
Phenix	RT	RT	RT	RT	RT	RT	RT		Lighting4
Philips SBC SP370 series		T					T		Lighting1 Philips SBC
Prego P-8426 http://www.sunmarket.fi/tuote.asp?TID=11990	R	R	R		R		R		X10 Pro = Rubicson
Profile Qnect 423000040,423000042				RT	RT	RT	RT		Lighting4 + AC Pro1 = AC
Profiles PAC-326R Belcanto	RT	RT	RT	RT	RT	RT	RT		ByronSX
Profitec KD310T https://akkuplus.de/profitec-KD-310-T-Energiekosten-Messgeraet-Sender		R		R			R		RSL
Proluxx projection screen	T	T	T		T	T	T		Lighting4
PROmax				T	T	T	T		IT
Proove –TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501	R	R	R	R	R	R	R		FineOffset
Quigg RC DS5 4001-A DE 3726				RT	RT		RT		Lighting4 + AC Pro = AC
Quotidom – http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html (not the Solutio version)	T	T	T	T	RT	RT	RT		BlindsT6
RAEX blind motor (YR1326 or YRL2016 controlled)		RT				RT	RT		BlindsT4
RAW data					RT	RT	RT		undec on
Renkforce RF101 smoke detector	RT	RT	RT	RT	RT	RT	RT		always on
Revolt NC5461 http://www.pearl.de/a-NC5462-5452.shtml		R		R			R		RSL
RFXSensor	R	R	R	R	R	R	R		X10
RFXMeter	R	R	R	R	R	R	R		X10
RGB LED strip driver dx.com - http://www.dx.com/ order nbr: 130913, (new TRC02 NOT supported)	T	RT	T						AD

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
- http://www.dx.com/ order nbr: 67412 * = receive only in Type2 used to get the RGB remote ID.									
RGB432W LED controller	T	T	T						Lighting5 RGB432W
RisingSun	RT	RT	RT	RT			RT		Lighting4
RUBICSON - stektermometer 48659, 48695 -pool sensor p48019	R		R	R	R	R	R		Rubicson
RohrMotor24 RMF blind motors http://www.rohrmotor24.eu/rohrmotor24	T	T	T	T	RT	RT	RT		BlindsT6
RollerTrol R-series blind motors - http://rollertrol.com/ * = receive in Type2 only used to get the remote ID.	T	RT	T	T	T		RT		BlindsT0
Rollertrol G-series blind motors	T	T	T	T	RT	RT	RT		BlindsT6
Sartano	RT	RT	RT	RT	RT		RT		Lighting4
SAS SA-200 smoke detector	RT	RT	RT	RT	RT	RT	RT		always on
Screenline motors - http://www.screenline.cz/en/				T			T		BlindsT13
SEAV TXS4				T			T		FAN SEAV TXS4
SelectPlus200689101 & SelectPlus200689103 (Action NL)		RT	RT	RT	RT	RT	RT		ByronSX
Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood		T					RT		Homeconfort,Fan SF01
Siemens (UK)	RT	RT	RT	RT	RT		RT		AD
SilverCrest 91089	RT	RT	RT				RT		Lighting4
SilverCrest 60494, 284705				RT	RT		RT		Lighting4 + AC Pro = AC
Silverline Premium - http://www.aluparts.nl	T	T	T	T	RT	RT	RT		BlindsT6
Simu Hz / RTS - http://www.simu.com/			T	T	T	T	T		RFY
Siro	T	T	T	T	RT	RT	RT		BlindsT6
Smartwares radiator valve http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html			T	T	T	T	T		Radiator1 Smartwares
Smartwares RM174RF, RM175RF				R	R	R	R		Ext2 = ARC Pro = Lighting4
Somfy / RTS http://www.somfy.co.uk/ To control Somfy Centralis use RFY2 commands.			T	T	T	T	T		RFY
Sonoff RF	RT	RT	RT	RT	RT	RT	RT		Lighting4
Sunperry blind motors		T					T		BlindsT9
Sunvic TLX1206	RT	RT	RT		RT		RT		X10
Sunvic TLX7506	R	R	R		R		R		X10
TechnoLine/Proficell http://www.elv.de/output/controller.aspx?cid=74&detail=10&detail2=27621 - TX95-TH, WS9180-TX104	R		R	R	R	R	R		Rubicson
Telldus 312716,313159,313160 https://www.lohelectronics.se/hemautomation/433mhz/sensorer-1110/smart-inne-och-utetermometer-med-hygrometer-10396	R	R	R	R	R	R	R		FineOffset
TFA - TS15C, TS34C,external temperature sensor 30.3133, anemometer 30.3149, UV sensor, rain sensor 30.3148, pool sensor 30.3160	R	R	R	R	R	R	R		Hideki
TFA - pool sensor 30.3056.10, 30.3216.20				R	R	R	R		Oregon
TFA external temperature sensor 30.3208.02				R	R	R	R		Hideki
TFA - rain sensor 30.3233						R	R		Hideki

Device	Type 1	Type 2	Ext	Ext 2	Pro 1	Pro 2	ProXL 1		Protocol
UPM/Esic (very short receiving range) WT260, WT260H, WT440H, WT450, WT450H, WDS500, RG700	R				R		R		Hideki
Unitec 48110 EIM 826				RT	RT		RT		Lighting4 + AC Pro = AC
Ventus WS155			R	R	R	R	R		Rubicson
Viking - 02035, 02038, 02811	R	R	R	R	R	R	R		FineOffset
Visonic CodeSecure	R	R	R	R	R	R	R		Visonic
Visonic PowerCode	R	R	R	R	RT	RT	R		Visonic
Wave Design extractor hood	T	T	T	T			T		Fan SF01
Waveman	T	T	T	T			T		Lighting1 Waveman
Westinghouse fan 7226640				T			T		Fan
WT0122 pool sensor			R		R	R	R		FineOffset
YOODA blind motors http://www.sukcesgroup.pl	T	T	T	T	RT	RT	RT		BlindsT6
X10 Ninja/Robocam		RT							X10
X10 PC Remote	RT								X10
X10 RTS10 / RFS10	RT	RT	RT	RT	RT	RT	RT		X10
X10 lighting	RT	RT	RT	RT	RT	RT	RT		X10
X10 security	RT	RT	RT	RT	RT	RT	RT		X10
Xdom	RT	RT	RT	RT	RT	RT	RT		X10
Xiron – EN6	R		R	R	RT	R	R		Rubicson

2.3. *undec on*

This parameter is for internal use by RFXCOM only!!!

If new sensor types are released, they will most probably not be decoded by the RFXtrx firmware. For this reason, we have added the option to enable receive of undecoded messages. This function is only to enable RFXCOM to add this new sensor type in the firmware if possible. If “undec on” is enabled in normal use the application will receive a lot of undecoded messages mostly as a result of RF noise or disturbed RF packets.

Important: For normal use “undec on” should be disabled

2.4. Sensitivity influenced by enabled protocols

All protocols can be enabled in the **Pro firmware** versions; however it is still preferred to enable only the protocols used for receive.

The sensitivity of the receiver part is highly influenced by the number of protocols enabled in Type1, Type2, Ext or Ext2 firmware. Lesser protocols enabled will make the receiver more sensitive for the enabled protocols.

There are a few protocols that will reduce or even eliminate receiving of other protocols if enabled in Type1, Type2, Ext or Ext2 firmware.

For example:

If the AD (LightwaveRF, Siemens) protocol is enabled it can stop receiving of Meiantech / Atlantic, Oregon 3.0, Visonic and Mertik.


All other protocols are disabled if BlindsT0 is enabled in Type1, Type2, Ext or Ext2 firmware.

	X10	ARC	AC	HomeEasy EU	Meiantech/Atlantic	Oregon 1.0	Oregon 2.1	Oregon 3.0 / OWL	ATI	Visonic/Keeloq	Mertik	AD (LWRF)	Hideki/UPM	La Crosse	FS20	ProGuard	BlindsT0	BlindsT1/T2/T3/T4	AE (Blyss)	Rubicson/Alecto	FineOffset/Viking	Lighting4	RSL/Revolt	Byron SX	Imagintronix/Opus	HomeConfort
X10																										
ARC																										
AC																										
HomeEasy EU																										
Meiantech/Atlantic																										
Oregon																										
ATI																										
Visonic/Keeloq																										
Mertik																										
AD (LWRF)																										
Hideki/UPM																										
La Crosse																										
FS20																										
ProGuard																										
BlindsT0																										
BlindsT1/T2/T3																										
AE (Blyss)																										
Rubicson																										
FineOffset/Viking																										
Lighting4																										
RSL																										
Byron SX																										
Imagintronix																										
HomeConfort																										

Green = enabled by default

2.5. RF range reduction

The RF signals operating distance is reduced when the signal has to pass through walls.

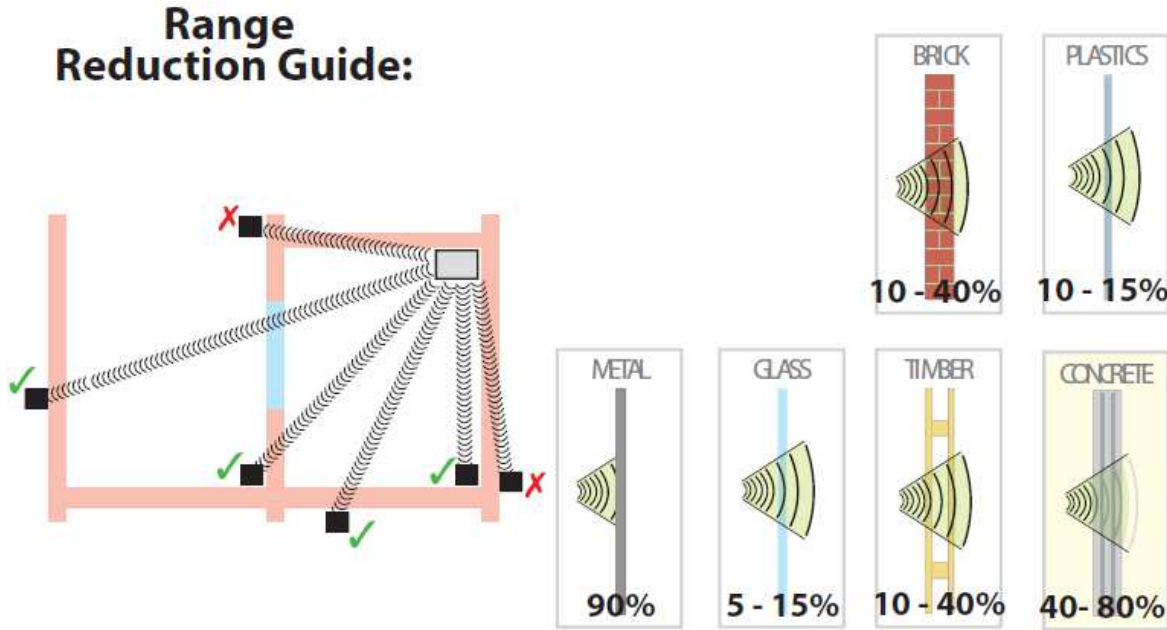

2.6. Home Automation software

For the list of Home Automation software that supports the RFXtrx see the web site

www.rfxcom.com

2.7. Dimensions

The dimensions of the RFXtrx/RFXrec are: 83.5 x 42 x 15 mm

Total height from bottom to antenna top is 122mm

The dimensions of the RFXtrx433E and RFXtrx433XL are: 83 x 59 x 22 mm

Total height from bottom to antenna top is 130mm

2.8. Electrical

The RFXtrx is powered by the 5 Volt of the USB interface.

Operating current;

Receive mode: 28 mA (0.14Watt)

Transmit mode: 45 mA

The RFXtrx Radiated RF power is 10dBm max.

2.9. Environmental conditions

Normal operating: 15°C to 35°C

Absolute min-max temperature: -10°C to 55°C

3. Install the USB driver

The RFXtrx has the FTDI FT232R USB interface chip installed.
The RFXtrx433XL has the FTDI FT230XQ USB interface chip installed.

The USB drivers are available at <http://www.ftdichip.com/Drivers/VCP.htm>

4. Run RFXflash on Linux under Mono

Open a Terminal screen in Linux (Ctrl-Alt-T)

Execute once:

Install Mono:

[sudo] apt-get install mono-runtime

Install VisualBasic support under Mono:

[sudo] apt-get install libmono-microsoft-visualbasic8.0-cil

If the USB device is created as ttyACMx you will need to create a link between
/dev/ttyACMx and a serial port /dev/ttySx.

This is not necessary if the device is created as /dev/ttyUSBx !!

[sudo] ln -sf /dev/ttyACM1 /dev/ttyS3

Note: sudo must be entered without brackets []. sudo is required if not running as super user.

Launch the RFXflash.exe program.

[sudo] mono RFXflash.exe

Note: RFXmngn does not operate under mono!

5. RFXmngnr test program

The RFXmngnr program supports decoding of received data and allows you to transmit commands.

After the connection the RFXmngnr program transmits a Reset and Get Status command so that it will know the RFXtrx type and configuration settings:

The screenshot shows the RFXmngnr software interface. The top menu bar includes 'File' and 'Information'. Below the menu is a toolbar with icons for a printer, a hand, a pencil, and a red 'X'. The main window has a tabbed interface with tabs for 'Main', 'Lighting1', 'Lighting2', 'Lighting3', 'Lighting4', 'Lighting5', 'Lighting6', 'HC', 'FunkBus', 'Chime', 'Fan', 'Curtain', 'Blinds1', 'RFY', 'Security1', 'Camera', 'Remote', 'Tstat1', 'Tstat2', 'Tstat3', and 'Tstat4'. The 'Main' tab is active, showing configuration options for the transceiver type (RFXtrx433), receiver frequency (433.92), and various protocol checkboxes. The 'Set Mode' and 'Save Settings' buttons are visible. Below the configuration options is a terminal window displaying the following log:

```
RFXtrx433 COM5 Serialnr: A12GLGHK
-----
26-Sep-18 04:09:52:205= Reset receiver/transceiver
-----
26-Sep-18 04:09:52:696= Get Status
-----
26-Sep-18 04:09:52:801
Packettype = Interface Message
subtype = Interface Response
Sequence nbr = 1
response on cmd = Get Status
Transceiver type = 433.92MHz
Firmware version = 1028
Firmware Type = Pro1
Noise level = 102
Transmit power = 10dBm
Hardware version = 1.0
Undec = off
Imagintronic disabled
Byron SX disabled
RSL disabled
Lighting4 disabled
FineOffset disabled
Rubicon disabled
AE Blyss disabled
```

The bottom status bar shows 'COM5', 'User version', and 'Version: 19.0.0.11'.

Transmitter protocols are always enabled but receiver protocols can be disabled. This is very useful because the receiver will become more sensitive when protocols not used are disabled. Select only the protocols to be used for receive, click **Set mode** and click **Save Settings**.

Note that these settings are lost in Type1 and Type2 firmware after a firmware update and need to be set again.

5.1. Receiver

The RF protocols to be received can be configured on the Main tab at **Set Mode**.

Click **Save Settings** to save the selected protocols in non-volatile memory of the RFXtrx. This configuration is now restored every time after a power up.

Note that these settings are lost after a firmware update in Type1 or Type2 firmware and need to be set again.

Note: Protocol enabling is only necessary for receive. Transmit protocols are always enabled.

The received RF data is decoded and displayed in the yellow window.

The screenshot shows the RFXmngR software interface. At the top, there's a menu bar with 'File' and 'Information'. Below it is a toolbar with icons for a hand, a lightbulb, a pencil, and a red 'X'. The 'Main' tab is selected, showing various configuration options. On the left, there are buttons for 'Reset RFXtrx' and 'Get Status'. In the center, there are input fields for 'Transceiver type' (set to 'RFXtrx433') and 'Receiver freq.' (set to '433.92'). Below these are 'Set Mode' and 'Save Settings' buttons. On the right, there are several checkboxes for enabling protocols: 'und', 'Imag', 'Byrc', 'RSL', 'Ligh', 'Fine', 'Rub', and 'AE I'. At the bottom, a yellow window displays a log of events: 'RFXtrx433 COM5 Serialnr: A12GLGHK', '26-Sep-18 04:09:52:205= Reset receiver/transce', '26-Sep-18 04:09:52:696= Get Status', and a detailed status report for '26-Sep-18 04:09:52:801' including packet type, subtype, sequence number, command, transceiver type, firmware version, and type.

RFXmngR

File Information

Main Lighting1 Lighting2 Lighting3 Lighting4 Lighting5 L

Transceiver type RFXtrx433

Receiver freq. 433.92

Set Mode

Save Settings

Reset RFXtrx

Get Status

und

Imag

Byrc

RSL

Ligh

Fine

Rub

AE I

RFXtrx433 COM5 Serialnr: A12GLGHK

26-Sep-18 04:09:52:205= Reset receiver/transce

26-Sep-18 04:09:52:696= Get Status

26-Sep-18 04:09:52:801

Packettype = Interface Message

subtype = Interface Response

Sequence nbr = 1

response on cmd = Get Status

Transceiver type = 433.92MHz

Firmware version = 1028


Firmware Type = Prol

5.2. Transmitter

The tabs after the Main tab are used to send commands to the transmitter.
For example, Lighting1 is used to send X10, ARC and some more.

Note: Protocol enabling is only necessary for receive. Transmit protocols are always enabled.

Select Type to see which protocols are supported on the different tabs.

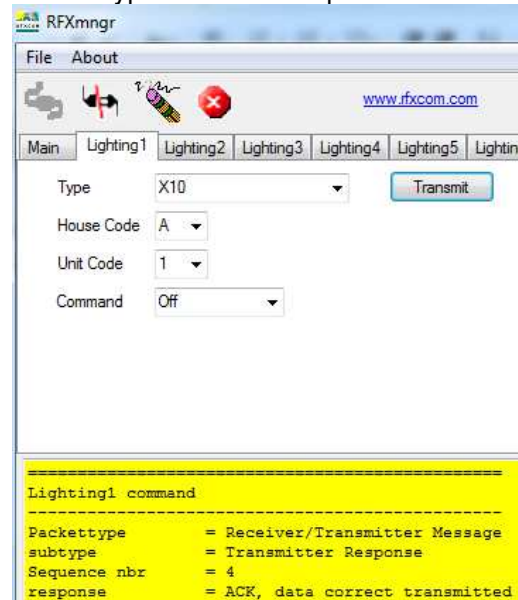

The transmitted commands are displayed in the yellow window including the acknowledge send by the RFXtrx, in the example above "ACK, data correct transmitted".

6. Flash update of the RFXtrx

6.1. *Update firmware in the RFXtrx*

Firmware is flashed in the RFXtrx using this procedure:

1. Depending on the RFXtrx type download the latest RFXtrx315_yy.hex, RFXrec433_yy.hex, RFXtrx433_yy.hex or RFXtrx433XL_yy.hex firmware file.
2. Connect the RFXtrx to a Windows system or Linux under MONO
3. Stop any program that is connected to the RFXtrx.
4. Start the RFXflash program with administrator rights (version 9.0.0.0 or higher)
5. Select the USB RFXtrx COM port or TCP/IP port and click the CONNECT button, (the red LED on the RFXtrx should switch on now)
6. Load the correct .hex firmware file for your RFXtrx,
7. Click the WRITE button,
8. Click the Normal Execution mode button.

IMPORTANT:

1. Do not interrupt the flash procedure when started.
2. It can happen that the flash procedure ends with a pop-up screen indicating errors. Just disconnect the RFXtrx and start again at step 5 until the flash procedure is finished without errors.


If the red LED does not switch on if you click the CONNECT button:

1. Check if you have selected the correct USB COM port.
2. If you have flashed the RFXtrx before and interrupted the flash procedure it is possible that the RFXtrx does not enter the flash state. Contact support@rfxcom.com for help.

Note: Receiver Settings are lost in Type1 and Type2 firmware after a firmware update and must be set again.


6.2. Update firmware in the RFXtrx step by step

- Click the Connect to Device button.

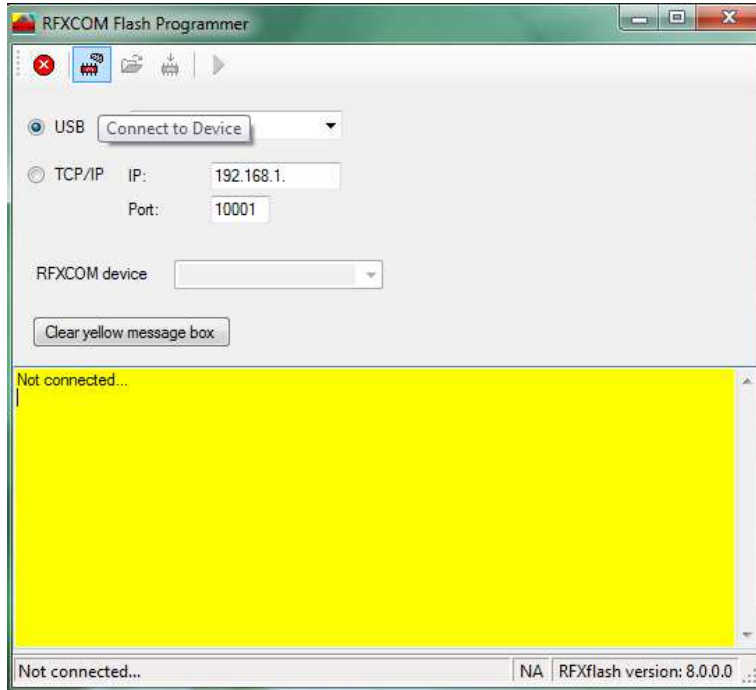


The RFXtrx will automatically switch from normal mode to the bootloader now.


- Click the Open HEX file button and load the RFXtrx`yyy??_zz`.hex file
Be sure to load the latest firmware file for the RFXtrx.
`yyy` indicates the RFXtrx frequency, so load the RFXtrx433 for an RFXtrx433!
`??` this is XL for the RFXtrxXL versions.
`zz` indicates the firmware version.

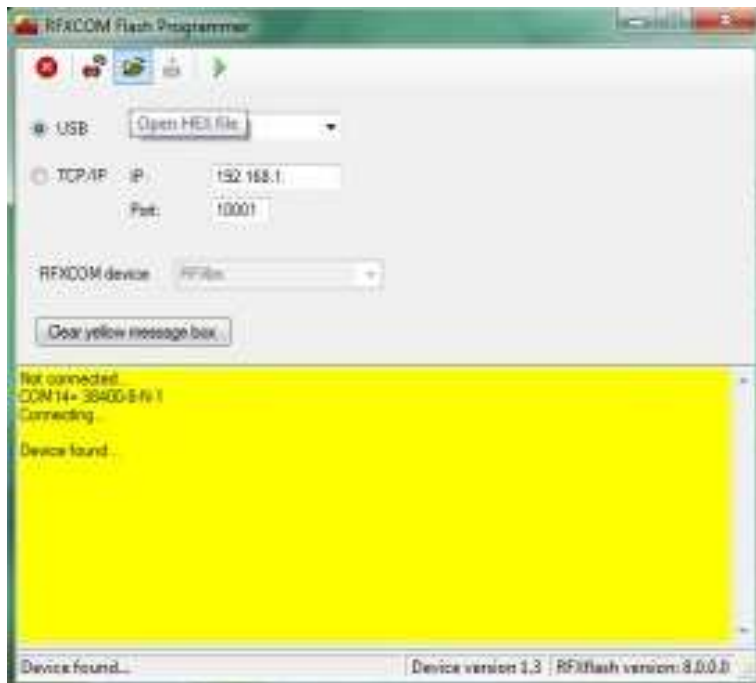

- Click the Write device button and the RFXtrx is flashed.

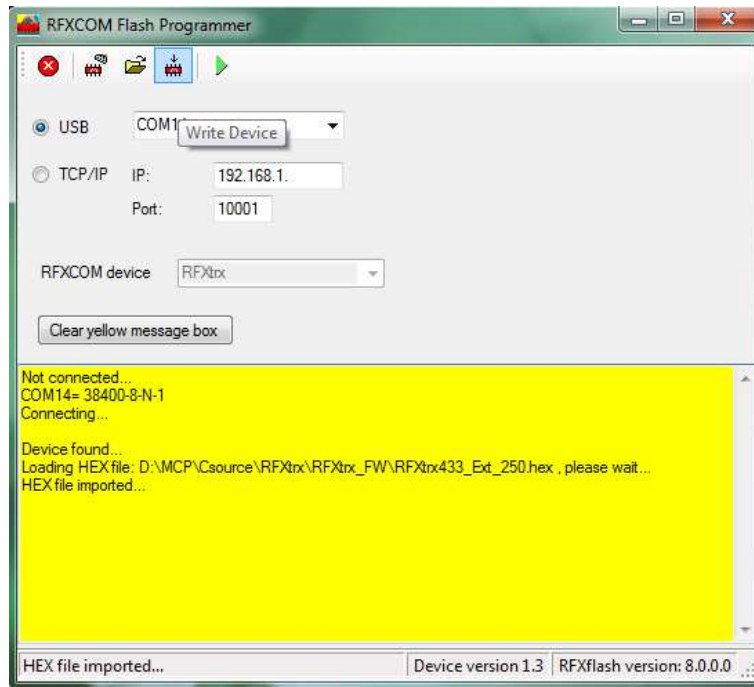

- Click on the Normal Execution Mode button to set the RFXtrx to running mode.

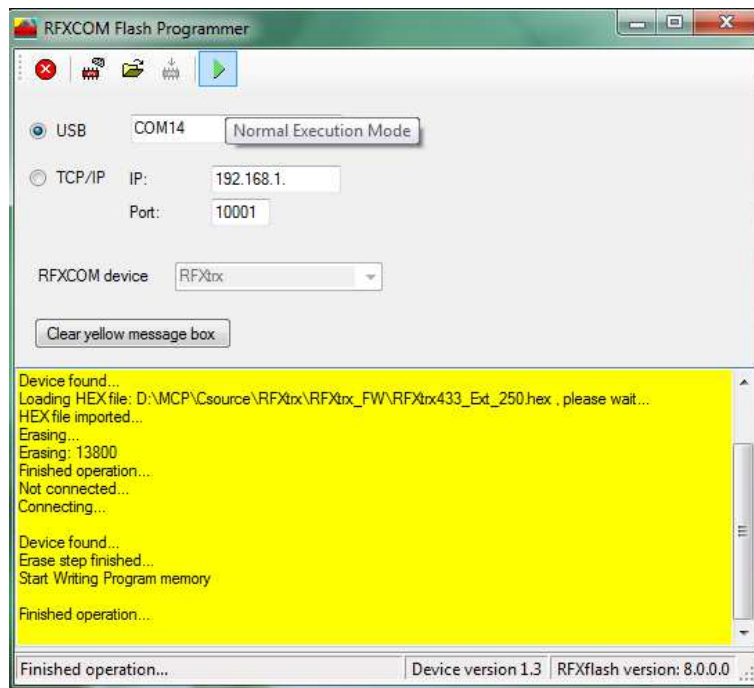

Note: Receiver Settings are lost in Type1 and Type2 firmware after a firmware update and must be set again.

7. RFXtrx433 special device codes

7.1. Remote commands

7.1.1. X10 RF Remote

Dec	Hex	Button
2	02	0
18	12	8
34	22	4
56	38	Rewind
58	3A	Info
64	40	CHAN+
66	42	2
82	52	Ent
96	60	VOL+
98	62	6
99	63	Stop
100	64	Pause
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	left mouse
121	79	left mouse-End
123	7B	Drag
124	7C	right mouse
125	7D	right mouse-End
130	82	1
146	92	9
160	A0	MUTE
162	A2	5
176	B0	Play
182	B6	Menu
184	B8	Fast Forward
186	BA	A+B
192	C0	CHAN-
194	C2	3
201	C9	Exit
209	D1	MP3
210	D2	DVD
211	D3	CD
212	D4	PC / Shift-4
213	D5	Shift-5
214	D6	Shift-Ent
215	D7	Shift-Teletext
216	D8	Text
217	D9	Shift-Text
224	E0	VOL-
226	E2	7
242	F2	Teletext
255	FF	Record

7.1.2. ATI Remote Wonder

Dec	Hex	Button	Dec	Hex	Button
0	00	A	57	39	Full screen
1	01	B	58	3A	DVD Audio
2	02	power	112	70	Cursor-left
3	03	TV	113	71	Cursor-right
4	04	DVD	114	72	Cursor-up
5	05	?	115	73	Cursor-down
6	06	Guide	116	74	Cursor-up-left
7	07	Drag	117	75	Cursor-up-right
8	08	VOL+	118	76	Cursor-down-right
9	09	VOL-	119	77	Cursor-down-left
10	0A	MUTE	120	78	V
11	0B	CHAN+	121	79	V-End
12	0C	CHAN-	124	7C	X
13	0D	1	125	7D	X-End
14	0E	2			
15	0F	3			
16	10	4			
17	11	5			
18	12	6			
19	13	7			
20	14	8			
21	15	9			
22	16	txt			
23	17	0			
24	18	snapshot ESC			
25	19	C			
26	1A	^			
27	1B	D			
28	1C	TV/RADIO			
29	1D	<			
30	1E	OK			
31	1F	>			
32	20	<-			
33	21	E			
34	22	v			
35	23	F			
36	24	Rewind			
37	25	Play			
38	26	Fast forward			
39	27	Record			
40	28	Stop			
41	29	Pause			
44	2C	TV			
45	2D	VCR			
46	2E	RADIO			
47	2F	TV Preview			
48	30	Channel list			
49	31	Video Desktop			
50	32	red			
51	33	green			
52	34	yellow			
53	35	blue			
54	36	rename TAB			
55	37	Acquire image			
56	38	edit image			

7.1.3. ATI Remote Wonder Plus

Dec	Hex	Button			
0	00	A	35	23	F
1	01	B	36	24	Rewind
2	02	power	37	25	Play
3	03	TV	38	26	Fast forward
4	04	DVD	39	27	Record
5	05	?	40	28	Stop
6	06	Guide	41	29	Pause
7	07	Drag	42	2A	TV2
8	08	VOL+	43	2B	Clock
9	09	VOL-	44	2C	TV
10	0A	MUTE	45	2D	VCR
11	0B	CHAN+	46	2E	RADIO
12	0C	CHAN-	47	2F	TV Preview
13	0D	1	48	30	Channel list
14	0E	2	49	31	Video Desktop
15	0F	3	50	32	red
16	10	4	51	33	green
17	11	5	52	34	yellow
18	12	6	53	35	blue
19	13	7	54	36	rename TAB
20	14	8	55	37	Acquire image
21	15	9	56	38	edit image
22	16	txt	57	39	Full screen
23	17	0	58	3A	DVD Audio
24	18	Open Setup Menu	112	70	Cursor-left
25	19	C	113	71	Cursor-right
26	1A	^	114	72	Cursor-up
27	1B	D	115	73	Cursor-down
28	1C	FM	116	74	Cursor-up-left
29	1D	<	117	75	Cursor-up-right
30	1E	OK	118	76	Cursor-down-right
31	1F	>	119	77	Cursor-down-left
32	20	Max/Restore Window	120	78	Left Mouse Button
33	21	E	121	79	V-End
34	22	v	124	7C	Right Mouse Button
			125	7D	X-End

7.1.4. Medion Remote

Dec	Hex	Button	Dec	Hex	Button
0	00	Mute	55	37	Acquire image
1	01	B	56	38	edit image
2	02	power	57	39	Full screen
3	03	TV	58	3A	DVD Audio
4	04	DVD	112	70	Cursor-left
5	05	Photo	113	71	Cursor-right
6	06	Music	114	72	Cursor-up
7	07	Drag	115	73	Cursor-down
8	08	VOL-	116	74	Cursor-up-left
9	09	VOL+	117	75	Cursor-up-right
10	0A	MUTE	118	76	Cursor-down-right
11	0B	CHAN+	119	77	Cursor-down-left
12	0C	CHAN-	120	78	V
13	0D	1	121	79	V-End
14	0E	2	124	7C	X
15	0F	3	125	7D	X-End
16	10	4			
17	11	5			
18	12	6			
19	13	7			
20	14	8			
21	15	9			
22	16	txt			
23	17	0			
24	18	snapshot ESC			
25	19	DVD MENU			
26	1A	^			
27	1B	Setup			
28	1C	TV/RADIO			
29	1D	<			
30	1E	OK			
31	1F	>			
32	20	<-			
33	21	E			
34	22	v			
35	23	F			
36	24	Rewind			
37	25	Play			
38	26	Fast forward			
39	27	Record			
40	28	Stop			
41	29	Pause			
44	2C	TV			
45	2D	VCR			
46	2E	RADIO			
47	2F	TV Preview			
48	30	Channel list			
49	31	Video Desktop			
50	32	red			
51	33	green			
52	34	yellow			
53	35	blue			
54	36	rename TAB			

7.2. Harrison address conversion to switch settings

The address used is converted to the address selected in the Harrison curtain motor using the table below.

switch	1	2	3	4		5	6	7	8
	H	H	H	H		X	X	X	X
A	0	1	1	0		1	0	0	0
B	0	1	1	1		2	0	0	0
C	0	1	0	0		3	0	0	1
D	0	1	0	1		4	0	0	1
E	1	0	0	0		5	0	1	0
F	1	0	0	1		6	0	1	0
G	1	0	1	0		7	0	1	1
H	1	0	1	1		8	0	1	1
I	1	1	1	0		9	1	0	0
J	1	1	1	1	10	1	0	0	1
K	1	1	0	0	11	1	0	1	0
L	1	1	0	1	12	1	0	1	1
M	0	0	0	0	13	1	1	0	0
N	0	0	0	1	14	1	1	0	1
O	0	0	1	0	15	1	1	1	0
P	0	0	1	1	16	1	1	1	1

H H H H = House code

X X X X = device code

Switch position in the motor:

Up = 1

Middle = not used!!!!

Down = 0

Examples:

If you assign the address E7 (1000 0110) to the curtain motor then set the switches to: 1=up, 2=down, 3=down, 4=down, 5=down, 6=up, 7=up, 8=down

If you assign the address A2 (0110 0001) to the curtain motor then set the switches to: 1=down, 2=up, 3=up, 4=down, 5=down, 6=down, 7=down, 8=up

7.3. *Flamingo, AB400, IMPULS, Sartano, Brennenstuhl, SilverCrest 91089, Cranenbroek switch settings*

Use type ELRO AB400D

Note that the HC (House Code A-P) is the house code used in programs and has no direct relation with the A,B,C,D,E buttons on the remotes!

```

      1 2 3 4   <== switches
HC=====
A   0 0 0 0
B   0 0 0 1
C   0 0 1 0
D   0 0 1 1
E   0 1 0 0
F   0 1 0 1
G   0 1 1 0
H   0 1 1 1
I   1 0 0 0
J   1 0 0 1
K   1 0 1 0
L   1 0 1 1
M   1 1 0 0
N   1 1 0 1
O   1 1 1 0
P   1 1 1 1

      5 A B C D E      5 A B C D E   <== switches
      5 6 7 8 9 10    5 6 7 8 9 10   <== OR switches
DC=====DC=====
1   0 0 0 0 0 0   33  0 0 0 0 0 1
2   0 0 0 1 0 0   34  0 0 0 1 0 1
3   0 0 1 0 0 0   35  0 0 1 0 0 1
4   0 0 1 1 0 0   36  0 0 1 1 0 1
5   0 1 0 0 0 0   37  0 1 0 0 0 1
6   0 1 0 1 0 0   38  0 1 0 1 0 1
7   0 1 1 0 0 0   39  0 1 1 0 0 1
8   0 1 1 1 0 0   40  0 1 1 1 0 1
9   1 0 0 0 0 0   41  1 0 0 0 0 1
10  1 0 0 1 0 0   42  1 0 0 1 0 1
11  1 0 1 0 0 0   43  1 0 1 0 0 1
12  1 0 1 1 0 0   44  1 0 1 1 0 1
13  1 1 0 0 0 0   45  1 1 0 0 0 1
14  1 1 0 1 0 0   46  1 1 0 1 0 1
15  1 1 1 0 0 0   47  1 1 1 0 0 1
16  1 1 1 1 0 0   48  1 1 1 1 0 1
17  0 0 0 0 1 0   49  0 0 0 0 1 1
18  0 0 0 1 1 0   50  0 0 0 1 1 1
19  0 0 1 0 1 0   51  0 0 1 0 1 1
20  0 0 1 1 1 0   52  0 0 1 1 1 1
21  0 1 0 0 1 0   53  0 1 0 0 1 1
22  0 1 0 1 1 0   54  0 1 0 1 1 1
23  0 1 1 0 1 0   55  0 1 1 0 1 1
24  0 1 1 1 1 0   56  0 1 1 1 1 1
25  1 0 0 0 1 0   57  1 0 0 0 1 1
26  1 0 0 1 1 0   58  1 0 0 1 1 1
27  1 0 1 0 1 0   59  1 0 1 0 1 1
28  1 0 1 1 1 0   60  1 0 1 1 1 1
29  1 1 0 0 1 0   61  1 1 0 0 1 1
30  1 1 0 1 1 0   62  1 1 0 1 1 1
31  1 1 1 0 1 0   63  1 1 1 0 1 1
32  1 1 1 1 1 0   64  1 1 1 1 1 1

```

Examples:

```

A1   0 0 0 0 0 0 0 0 0 0
A15  0 0 0 0 1 1 1 0 0 0
N2   1 1 0 1 0 0 0 1 0 0
N11  1 1 0 1 1 0 1 0 0 0

```

0 = switch off

1 = switch on

7.4. Energenie 5-gang 429.950

To know the codes to use open the remote and check the 1 to 5 jumpers connected.
If a jumper connection is open it is a 1. If connected it is a 0 (zero)

	1	2	3	4	jumper setting in the remote
HC=====					
A	0	0	0	0	
B	0	0	0	1	
C	0	0	1	0	
D	0	0	1	1	
E	0	1	0	0	
F	0	1	0	1	
G	0	1	1	0	
H	0	1	1	1	
I	1	0	0	0	
J	1	0	0	1	
K	1	0	1	0	
L	1	0	1	1	
M	1	1	0	0	
N	1	1	0	1	
O	1	1	1	0	
P	1	1	1	1	

If jumper 5 is open (1) than add 5 to the remote code.

Examples:

Jumper	Button Code
1 2 3 4 5	
1 0 0 0 0	1 I1
1 0 0 0 1	1 I6

7.5. Phenix, IDK YC-4000S switch settings

Use type ELRO AB400D

Note that the HC (House Code A-P) is the house code used in programs and has no direct relation with the A,B,C,D,E buttons on the remotes!

```
HC   switch
     1 2 3 4
=====
A    0 0 0 0
B    0 0 0 1
C    0 0 1 0
D    0 0 1 1
E    0 1 0 0
F    0 1 0 1
G    0 1 1 0
H    0 1 1 1
I    1 0 0 0
J    1 0 0 1
K    1 0 1 0
L    1 0 1 1
M    1 1 0 0
N    1 1 0 1
O    1 1 1 0
P    1 1 1 1
```

```
DC   switch
     5 A B C D
=====
1    0 0 0 0 0
2    0 0 0 1 0
3    0 0 1 0 0
4    0 0 1 1 0
5    0 1 0 0 0
6    0 1 0 1 0
7    0 1 1 0 0
8    0 1 1 1 0
9    1 0 0 0 0
10   1 0 0 1 0
11   1 0 1 0 0
12   1 0 1 1 0
13   1 1 0 0 0
14   1 1 0 1 0
15   1 1 1 0 0
16   1 1 1 1 0
17   0 0 0 0 1
18   0 0 0 1 1
19   0 0 1 0 1
20   0 0 1 1 1
21   0 1 0 0 1
22   0 1 0 1 1
23   0 1 1 0 1
24   0 1 1 1 1
25   1 0 0 0 1
26   1 0 0 1 1
27   1 0 1 0 1
28   1 0 1 1 1
29   1 1 0 0 1
30   1 1 0 1 1
31   1 1 1 0 1
32   1 1 1 1 1
```

7.6. HE105 switch settings

Unitnr	HE105 switches				
	1	2	3	4	5
0	0	0	0	0	0
1	0	0	0	0	1
2	0	0	0	1	0
3	0	0	0	1	1
4	0	0	1	0	0
5	0	0	1	0	1
6	0	0	1	1	0
7	0	0	1	1	1
8	0	1	0	0	0
9	0	1	0	0	1
10	0	1	0	1	0
11	0	1	0	1	1
12	0	1	1	0	0
13	0	1	1	0	1
14	0	1	1	1	0
15	0	1	1	1	1
16	1	0	0	0	0
17	1	0	0	0	1
18	1	0	0	1	0
19	1	0	0	1	1
20	1	0	1	0	0
21	1	0	1	0	1
22	1	0	1	1	0
23	1	0	1	1	1
24	1	1	0	0	0
25	1	1	0	0	1
26	1	1	0	1	0
27	1	1	0	1	1
28	1	1	1	0	0
29	1	1	1	0	1
30	1	1	1	1	0
31	1	1	1	1	1

7.7. HQ COCO-20

Note that the HC (House Code A-P) is the house code used in programs and has no direct relation with the A,B,C,D,E buttons on the remotes!

```

    6 7 8 9 <== switches in module
HC=====
A   0 0 0 0
B   0 0 0 1
C   0 0 1 0
D   0 0 1 1
E   0 1 0 0
F   0 1 0 1
G   0 1 1 0
H   0 1 1 1
I   1 0 0 0
J   1 0 0 1
K   1 0 1 0
L   1 0 1 1
M   1 1 0 0
N   1 1 0 1
O   1 1 1 0
P   1 1 1 1

    10 1 2 3 4 5      10 1 2 3 4 5 <== switches in module
DC=====DC=====
1   0 0 0 0 0 0 33  1 0 0 0 0 0
2   0 0 0 0 0 1 34  1 0 0 0 0 1
3   0 0 0 0 1 0 35  1 0 0 0 1 0
4   0 0 0 0 1 1 36  1 0 0 0 1 1
5   0 0 0 1 0 0 37  1 0 0 1 0 0
6   0 0 0 1 0 1 38  1 0 0 1 0 1
7   0 0 0 1 1 0 39  1 0 0 1 1 0
8   0 0 0 1 1 1 40  1 0 0 1 1 1
9   0 0 1 0 0 0 41  1 0 1 0 0 0
10  0 0 1 0 0 1 42  1 0 1 0 0 1
11  0 0 1 0 1 0 43  1 0 1 0 1 0
12  0 0 1 0 1 1 44  1 0 1 0 1 1
13  0 0 1 1 0 0 45  1 0 1 1 0 0
14  0 0 1 1 0 1 46  1 0 1 1 0 1
15  0 0 1 1 1 0 47  1 0 1 1 1 0
16  0 0 1 1 1 1 48  1 0 1 1 1 1
17  0 1 0 0 0 0 49  1 1 0 0 0 0
18  0 1 0 0 0 1 50  1 1 0 0 0 1
19  0 1 0 0 1 0 51  1 1 0 0 1 0
20  0 1 0 0 1 1 52  1 1 0 0 1 1
21  0 1 0 1 0 0 53  1 1 0 1 0 0
22  0 1 0 1 0 1 54  1 1 0 1 0 1
23  0 1 0 1 1 0 55  1 1 0 1 1 0
24  0 1 0 1 1 1 56  1 1 0 1 1 1
25  0 1 1 0 0 0 57  1 1 1 0 0 0
26  0 1 1 0 0 1 58  1 1 1 0 0 1
27  0 1 1 0 1 0 59  1 1 1 0 1 0
28  0 1 1 0 1 1 60  1 1 1 0 1 1
29  0 1 1 1 0 0 61  1 1 1 1 0 0
30  0 1 1 1 0 1 62  1 1 1 1 0 1
31  0 1 1 1 1 0 63  1 1 1 1 1 0
32  0 1 1 1 1 1 64  1 1 1 1 1 1

```

Examples:

Switch 6 7 8 9 0 1 2 3 4 5

```

=====
A1   0 0 0 0 0 0 0 0 0 0
A15  0 0 0 0 1 1 1 0 0 0
N2   1 1 0 1 0 0 0 1 0 0
N11  1 1 0 1 1 0 1 0 0 0

```

0 = switch off

1 = switch on

7.8. MDREMOTE V106, V107

This MDREMOTE has been tested.

<http://www.ultraleds.co.uk/mini-dimmer-with-rf-remote-control-12-or-24v-dc-12a-maximum.html>

The RFXtrx433 can only transmit MDREMOTE commands.

Procedure to find the ID of the MDREMOTE: In RFXmngr enable the X10 protocol and enable "Undec on". Press a button on the MDREMOTE remote.

The undecoded message contains the ID in the 2nd and 3rd byte, for example:

UNDECODED NEC:20AF6801D1

The 2 bytes after 20 is the MDREMOTE ID, in this example AF 68

7.9. MDREMOTE V108, EKAB-10KRF

This MDREMOTE has been tested.

- <http://www.ledstripkoning.nl/accessoires/dimmers-wit/draadloze-dimmer-10-knops-rf/>

Procedure to find the ID of the MDREMOTE: In RFXmngr enable the Lighting4 protocol and enable "Undec on". Press a button on the MDREMOTE remote.

The undecoded message contains the ID in the 2nd and 3rd byte, for example:

UNDECODED ARC:201A0703FCFC

The 2 bytes after 20 is the MDREMOTE ID, in this example 1A 07

7.10. Aoke relay

The Aoke 12V DC - 315MHz or 433.92MHz 1 channel relay is available at www.aliexpress.com store No.110758. Indicate clearly the required frequency when ordering!

The 1 channel learning relays can be used, see the picture below.

For example, for 1 relay:

http://www.aliexpress.com/store/product/DC12V-1CH-wireless-switch-remote-control-system-remote-control-switch-for-guard-door-window-curtain/110758_936534863.html

or for 6 relays:

http://www.aliexpress.com/store/product/ak-DC12V-1CH-RF-rocker-switch-livolo-switch-system-in-china-j-12a-108d-smart-house/110758_1007306574.html



The jumper next to the learning button defines to operating mode:
Open = momentary
1-2 = toggle mode
2-3 = on/off mode (to be used with the RFXtrx)

7.11. SEAV TXS4

The ID can be found using RFXmngnr and enable only ByronSX and undec on.

Or calculate the ID:

A SW1 switch on = 1

```
|-----SW1-----|
 1 2 3   4 5 6 7   8 9 10
0 x x x | x x x x | x x x 0 | 0 1 0 1
```

For example SW1 = on off on off on off on off on off

The ID will become:

```
|-----SW1-----|
 1 2 3   4 5 6 7   8 9 10
0 1 0 1 | 0 1 0 1 | 0 1 0 0 | 0 1 0 1 this is hex: 5 5 4 5
```

7.12. How to find the dx.com RGB LED strip driver ID

Valid for the TRC02 remote with 2 batteries.

Flash the RFXtrx433 with Type2 firmware to be able to receive the remote ID in RFXmngnr.
In RFXmngnr enable only the LightwaveRF (AD) protocol.

```
-----
Packettype   = Lighting5
subtype      = RGB TRC02
Sequence nbr = 5
ID           = FCC48B
Command      = On
Signal level = 8
The ID is: FC C4 8B
```

If necessary flash the RFXtrx433 back to Type1 or ext if Type2 does not support devices you need. (See chapter 2.2)

7.13. How to find the dx.com RGB LED strip driver ID (rev. 2)

Valid for the TRC02 remote with 3 batteries and ebay.com 191481664563.

In RFXmngnr enable only the Lighting4 protocol.

```
-----
Packettype   = Lighting4
subtype      = PT2262
Sequence nbr = 29
Code         = 161C84
The ID is: 16 1C
```

7.14. How to find the Eurodomest ID

You can assign a random ID to the Eurodomest. If you want to use the same ID as the remote you can find the ID of the remote using RFXmngnr.

Start RFXmngnr and enable only the Lighting4 protocol.

Press a button on the remote and you will receive a message like:

```
-----
Packettype   = Lighting4
subtype      = PT2262
Sequence nbr = 12
Code         = 6DFE0F
The ID is: 6 DF E0
```

Note: Eurodomest can also be controlled using ARC.

7.15. How to find the Screenline ID

You can assign a random ID to the Screenline. If you want to use the same ID as the remote you can find the ID of the remote using RFXmng.

Start RFXmng and enable only the Lighting4 protocol and undec on.

Press a button on the remote and you will receive a message like:

```
-----  
Packettype = UNDECODED RF Message  
UNDECODED ARC:4000F7BD1D2AF04B7
```

The ID starts at the 7th character, in this example the ID = 7B D1

7.16. How to find the Avantek remote ID

You can find the ID of the remote using RFXmng.

Start RFXmng and enable only the Lighting4 protocol.

Press a button on the remote and you will receive a message like:

```
Packettype      = Lighting4  
subtype         = PT2262  
Sequence nbr    = 3  
Code            = 122336 decimal:1188662  
S1- S24         = 0001 0010 0010 0011 0011 0110  
Pulse           = 280 usec  
Signal level    = 7   -64dBm
```

The ID to be used is 1 22 33

8. Blyss commands

Some Blyss devices, like the Blyss motors, require a special command sequence number. To simplify it; 0,1,2,3,4,0,1,...

This sequence number is normally created by the Blyss remote but now also by the RFXtrx433.

If you use a Blyss remote and the application (Domoticz, DomotiGa, Homeseer...) does not sync with the received Blyss command you will see that you need to send multiple commands with the RFXtrx433 before the Blyss device will respond.

For example,

The Blyss remote transmits with the sequence numbers 0,1,2

If the RFXtrx433 transmits now with sequence number 0 it will not be seen by the Blyss device as a valid command and at the time the RFXtrx433 transmits the commands 1,2,3 the command will be detected as valid when it receives the command with sequence number 3.

The same is true for the remote. If you transmit commands with the RFXtrx433 and after that with a Blyss remote you need to transmit several commands with the remote before the Blyss device responds.

I guess the same behaviour will show if you use multiple Blyss remotes.

9. Somfy RTS

Somfy RTS* devices can only be controlled by the RFXtrx433E / RFXtrx433XL. (not with the RFXtrx433)

The RFXtrx433E/RFXtrx433XL version is an RFXtrx433 with additional hardware to enable the RFY protocol used to control Somfy RTS.

The 433.42MHz transmitter in the RFXtrx433E/RFXtrx433XL is used for a reliable control of the Somfy RTS devices over a large distance and through walls.

The RFXtrx433E/RFXtrx433XL 433.92MHz transmitter is used to control all other devices.

To pair the Somfy RTS device:

- Select a unique ID and unitcode for the RFXCOM RFY device.
- Disconnect power from all Somfy RTS devices except the device to pair.
- Press the Program button > 2 seconds on the original Somfy remote until the Somfy device responds.
- Transmit a Program command with the RFXtrx433E/RFXtrx433XL. The Somfy RTS device should respond indicating the pair command was successful.

The RFXCOM RFY remote is registered in the RFXtrx433E/RFXtrx433XL by sending a Program command.

Up to 40 RFXCOM RFY remotes can be registered in the RFXtrx433E/RFXtrx433XL.

Remotes can be erased from the RFXtrx433E/RFXtrx433XL using the RFXmngn program.

The Somfy RTS device can be controlled by any application as long as the same ID and Unit Code are used.

For example, if the RTS device is paired using RFXmngn with ID=1 02 03 and Unit Code 1, the RTS device can be controlled with Homeseer using the same ID and unit code.

Usage:

To control Somfy Centralis modules use the RFY2 = > 2 seconds commands.

Somfy Tilt motors can be configured in 2 modes, US or European.

To toggle between modes, press the Reset/ Prog button 2 s. Repeat until the LED, according to the desired configuration, lights up. Store by pressing 2 s.

To control Venetian Blinds in US mode:

- up/down (transmit < 0.5 seconds): open or close
- up/down (transmit > 2seconds): change angle

To control Venetian Blinds in Europe mode:

- up/down (transmit < 0.5 seconds): change angle
- up/down (transmit > 2seconds): open or close

Somfy RTS motors have a limited number of memory locations for the remotes. Some have a max of 10 remotes. If you try to pair the 11th remote (can be a RFXtrx433E/RFXtrx433XL ID-unit) the motor reacts as if the pairing was successful but there is no response on an up/down command.

To solve this, reset the motor to remove all remotes.

* Somfy RTS are registered trademarks of Somfy System, Inc.

9.1. How to move RFX devices to another RFXtrx433E or RFXtrx433XL

Important:

1. If an RFX device is moved to another RFXtrx433E/XL do not use the old RFXtrx433E/XL to control the RFX devices, because the rolling code will become out of sync with the Somfy device.
2. Use the latest RFXmngnr and for the RFXtrx433E the latest Pro1 or Pro2 firmware and for the RFXtrx433XL the latest ProXL1 firmware

Step 1: List all RFX devices in the “old” RFXtrx433E or RFXtrx433XL.

The screenshot shows the RFXmngnr software interface. The 'Main' tab is selected, and the 'RFY' device type is chosen. The 'Transmit' button is highlighted. The 'ID' field is set to 0, 00, 00. The 'Unit Code' is set to 1. The 'Command' dropdown is set to 'List remotes'. The 'rfu1', 'rfu2', and 'rfu3' fields are all set to 00. The interface includes a status bar at the bottom with icons for various functions and a URL 'www.rfxcom.com'.

02-Dec-18 03:13:53:971= RFY command

Packettype = RFY
subtype = RFY
Sequence nbr = 18
idl-3 = 000000 decimal:0
Unit = 1
Command = List remotes
rfu1 = 00
rfu2 = 00
rfu3 = 00
Signal level = +10 dBm

02-Dec-18 03:13:54:284
Packettype = Interface Message
subtype = RFY remote:0 ID:00 00 01 unitnbr:1 rfu1:A4 rfu2:0 rfu3:14

Step 2: Connect the “new” RFXtrx433E or RFXtrx433XL.

Select the ID, Unit Code, rfu1, rfu2 and rfu3 values.

Transmit a Program command. The values are now programmed in the “new” RFXtrx and the Somfy device can be controlled with this RFXtrx.

Transmit an Up and Down command to be sure the motor is no longer in program mode!

The screenshot shows the RFXmngnr software interface. The 'Main' tab is selected, and the 'RFY' device type is chosen. The 'Transmit' button is highlighted. The 'ID' field is set to 0, 00, 01. The 'Unit Code' is set to 1. The 'Command' dropdown is set to 'Program'. The 'rfu1' field is set to A4, 'rfu2' is set to 00, and 'rfu3' is set to 14. The interface includes a status bar at the bottom with icons for various functions and a URL 'www.rfxcom.com'.

02-Dec-18 03:13:54:284
Packettype = Interface Message
subtype = RFY remote:0 ID:00 00 01 unitnbr:1 rfu1:A4 rfu2:0 rfu3:14

10. BlindsT6

To add a RFXtrx433/E/XL BlindsT6 device to the blinds motor:

1. press the "program" button twice on the original remote ==> 2 beeps
2. transmit the "confirm" command with the RFXtrx433/E/XL ==> 5 beeps

10.1. Dooya DT52E, DT82TV, DT82TN

- Select a random ID different from all zeroes and a unit code 1 to 15
- Press the program button on the motor until the LED lights up
- Transmit a Confirm command
- The LED on the motor starts blinking
- Transmit again a Confirm command
- The LED on the motor blinks 5 times
- The motor can be controlled now by the RFXtrx433/E/XL

11. ID switches Casafan and Lucci Air fans

Select the ID for switch settings:

ID	Remote switches			
	1	2	3	4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A	1	0	1	0
B	1	0	1	1
C	1	1	0	0
D	1	1	0	1
E	1	1	1	0
F	1	1	1	1

For LucciAir AC fan: 0 = ON

For Casafan and LucciAir DC fan: 1 = ON

12. Transmit Funkbus (Insta, Gira, Jung, Berker)

With Pro2 or ProXL1 firmware you can transmit Funkbus commands using ID : 3F CC.
If the Home Automation application has Funkbus control not implemented, you can use an ANSLUT device instead.

The 1st digit of the ID indicates the Group.


0 = A,
1 = B,
2 = C,
3 = Scenes

The last 2 bytes are the remote ID: 3F CC.

For de groups A, B en C: Unit code 1-8 = channel 1-8


For group Scenes (3) : Unit code 1-5 = scene 1-5.

Example Group A - Channel 1 - On

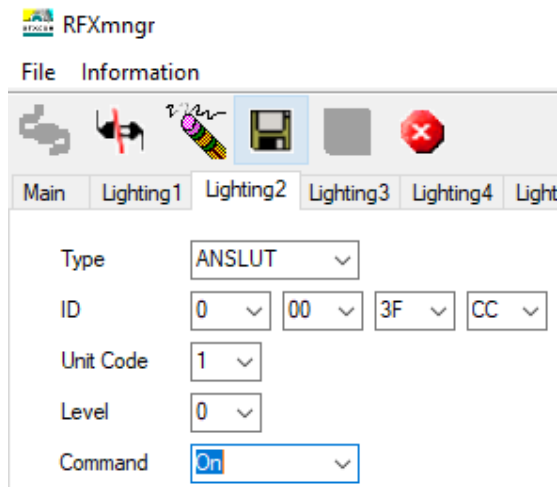

The screenshot shows the RFXmngtr software interface. At the top, there is a menu bar with 'File' and 'Information'. Below the menu bar is a toolbar with icons for various functions. The main window has a tabbed interface with tabs labeled 'Main', 'Lighting1', 'Lighting2', 'Lighting3', 'Lighting4', and 'Lighting5'. The 'Lighting1' tab is selected. In the 'Lighting1' tab, the 'Type' dropdown is set to 'ANSLUT'. The 'ID' field is composed of four dropdowns: the first is '0', the second is '00', the third is '3F', and the fourth is 'CC'. The 'Unit Code' dropdown is set to '1'. The 'Level' dropdown is set to '0'. The 'Command' dropdown is set to 'On'.

Example Group Scenes – Scene 5 - On

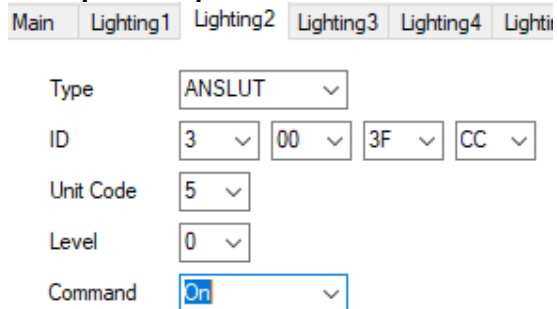

The screenshot shows the RFXmngtr software interface. At the top, there is a menu bar with 'File' and 'Information'. Below the menu bar is a toolbar with icons for various functions. The main window has a tabbed interface with tabs labeled 'Main', 'Lighting1', 'Lighting2', 'Lighting3', 'Lighting4', and 'Lighting5'. The 'Lighting2' tab is selected. In the 'Lighting2' tab, the 'Type' dropdown is set to 'ANSLUT'. The 'ID' field is composed of four dropdowns: the first is '3', the second is '00', the third is '3F', and the fourth is 'CC'. The 'Unit Code' dropdown is set to '5'. The 'Level' dropdown is set to '0'. The 'Command' dropdown is set to 'On'.

13. Transmit undecoded ARC commands.

Plug-in modules or other equipment with a PT2262 can be controlled using Lighting4. There are a lot of brands using the PT2262 and some of them use the same timing (350) as used by the ARC devices but a different protocol definition.

Messages will be received as undecoded ARC messages if the protocol definition does not match the definition of the ARC protocol. Remote commands are received as ARC commands with a wrong house and device code and/or command code or as undecoded ARC messages if “undec on” is enabled. Decoding of these remotes is therefore not possible because they overlap the ARC protocol partly.

But transmitting these commands is possible using the Lighting4 command.

So if we receive this command UNDECODED ARC:18014403:
(18 is not used)

hex to binary table

```
0=0 0 0 0
1=0 0 0 1
2=0 0 1 0
3=0 0 1 1
4=0 1 0 0
5=0 1 0 1
6=0 1 1 0
7=0 1 1 1
8=1 0 0 0
9=1 0 0 1
A=1 0 1 0
B=1 0 1 1
C=1 1 0 0
D=1 1 0 1
E=1 1 1 0
F=1 1 1 1
```

0 1 4 4 0 3 = selection box 0000 0001 0100 0100 0000 0011

Not selected = 0, box selected = 1


And the Lighting4 command contains the same “undec code” 01 44 03:

Lighting4 command:09 13 00 04 01 44 03 01 5E 00

pulse timing is 350 = hex 015E

Another example:

For this command UNDECODED ARC:18014430 set on the Lighting4 tab in RFXmngnr selection box 1 to 24 to 0 1 4 4 3 0 = 0000 0001 0100 0100 0011 0000

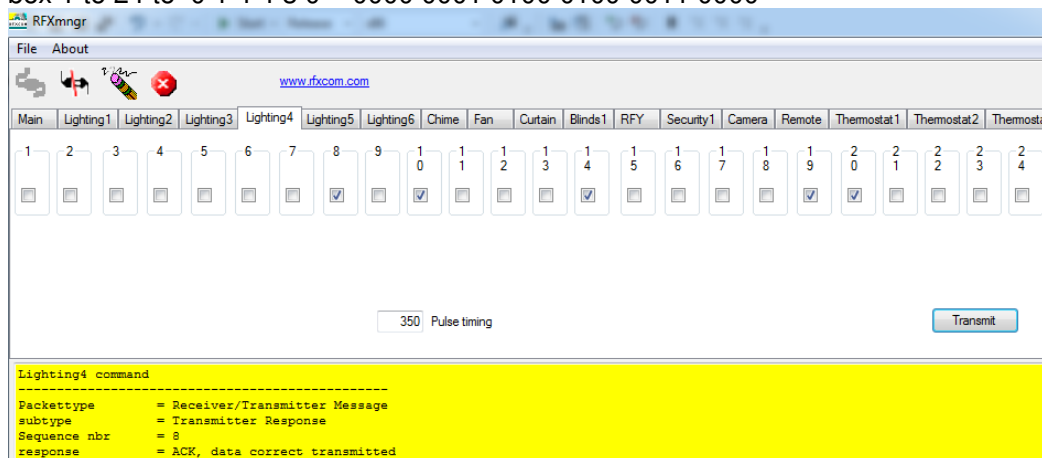

14. MCZ pellet stove.

RFXtrx433/RFXtrx433E:

In the Type2 firmware zip file which is available on the downloads page you will find a special firmware RFXtrxMCZ.hex that enables you to know the ID of the your MCZ remote.

Flash the RFXtrxMCZ.hex firmware in your RFXtrx433/E/XL and start RFXmngn.

RFXtrx433XL:

In RFXmngn select Receiver Freq 434.50 and enable MCZ

Transmit a command with the MCZ remote and you will receive the information.

The ID in this example is 81 3F 22

```
Packettype = Thermostat4
subtype    = MCZ pellet stove 2 fans model
Sequence nbr = 0
ID         = 0x813F22 decimal:8470306
Beep       = Yes
Fan1 speed = 1
Fan2 speed = 7
Flame power = 1
Command    = Off
Signal level = 6 -72dBm
```

Flash now Type2 or Ext firmware in your RFXtrx433/RFXtrx433E and you can control your MCZ stove using the received ID.

Important: remove the batteries from the original remote before you start using the RFXtrx433/E/XL to control the MCZ stove!

15.5. Sonoff

All Sonoff 433MHz RF receiver devices can be controlled by the RFXtrx433/E/XL using Lighting4 with a pulse timing of 370usec.

The 4 button Sonoff Lighting4 remote code:

The last digit indicates the button:

A	0001	hex 1
B	0010	hex 2
C	0100	hex 4
D	1000	hex 8

The first 5 digits are the ID. Here an example of ID=D216B button=A

Packettype = Lighting4

subtype = PT2262


Sequence nbr = 1

Code = D216B1 decimal:13768369

S1- S24 = 1101 0010 0001 0110 1011 0001

Pulse = 370 usec

Signal level = 8 -56dBm

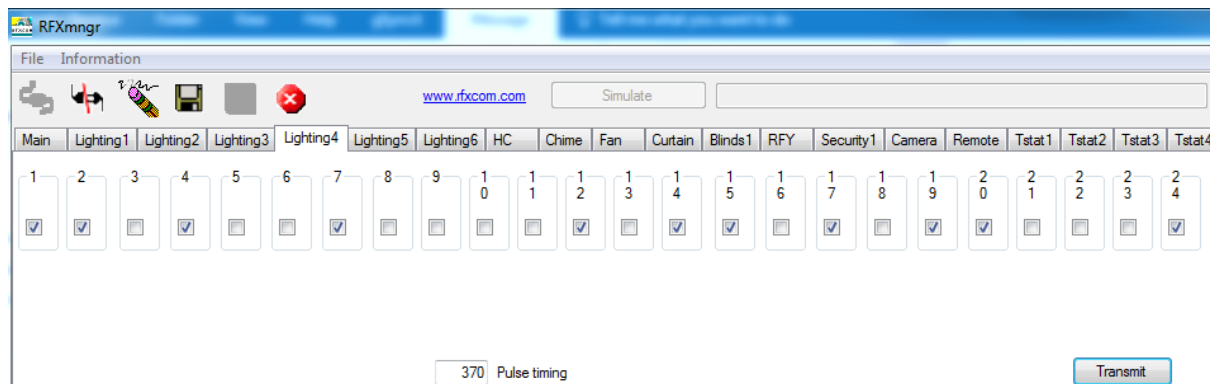

The Lighting4 commands can be used for example to control the 4 relays in a Sonoff 4CH Pro https://www.banggood.com/SONOFF-4CH-Pro-10A-2200W-2_4Ghz-433MHz-RF-InchingSelf-LockingInterlock-Smart-Home-p-1153324.html

15.6. PT2262 and EV1527 oscillator resistors accepted

For the PT2262 use a 3M3 oscillator resistor

For the EV1527 a 220K, 270K or 390K oscillator resistor can be used.

16. Receive and Transmit RAW data

The Pro firmware can receive and transmit RAW data. This can be used to replay received data received from a remote. Note that this can only be used for a protocol with fixed code and rolling code cannot be used.

It is unknown if and how this is implemented in Home Automation applications!

Here an example of a packet received from an ARC remote in RFXmngr:

```
RAW Packet:
687F000001010804720132046701340467041401BB01300474013104680131046E0131046D0131047001330470012D046B0
133046C013004720132046E013104690132046A0133046D0138046C0130046A041401B901310471041701B70133046A0133
046F012E0000
Packettype      = RAW Packet
Packet Length   = 104
subtype         = RAW packet
Sequence nbr    = 0
Repeat          = 1
Nbr of pulses   = 25
264 1138 306 1127 308 1127 1044 443 304 1140 305 1128 305 1134 305 1133 305 1136
307 1136 301 1131 307 1132 304 1138 306 1134 305 1129 306 1130 307 1133 312 1132
304 1130 1044 441 305 1137 1047 439 307 1130 307 1135 302 0
```

The last value of zero indicates a gap timeout and the real gap is greater than 8000. To replay this packet replace the last zero with a value greater than 8000.

To replay this in RFXmngr, create a text file with the content below and send it on the RAW transmit tab.

The first value is 0 which indicates it is a single packet

The next value (7 in this example) is the repeat count.

Do not set the repeat count too high to lower the risk to disturb other RF transmissions.

```
0
7
264
1138
306
1127
308
1127
1044
443
304
1140
305
1128
305
1134
305
1133
305
1136
```

the next values

```
307
1135
302
10000
```

If you receive multiple RAW packet with more than 62 pulses, try to find the gap. This is normally a higher value and smaller than 8000. Here an example with a gap value of 6600 and the next 6596.

```
RAW Packet:
FC7F000000001190491012C0491012A0492012A0490012A049201270493012801B7040601BC03FF01B903FF048F012C04930
1270493012801B9040001BB03FF01BC040101BB03FF01BB040019C8013C049301280491012A049201290492012704940127
0494012701BE040201BA03FF01BD03FE0492012A049201290492012901BB03FF01BC03FF01BB040401BB03FF01BD040019C
401400490012B048F012D048F012A04950127049301270494012701BC040201BD03FF01BA03FF0493012804920128049501
2601BB040001BC040001B8040601B903FF01BC03FF19C801400492012A049301280492012A0495012704940128049501280
1BA040501BD
Packettype      = RAW Packet
Packet Length   = 252
subtype         = RAW packet
Sequence nbr    = 0
Repeat          = 0
Nbr of pulses   = 62
281  1169  300  1169  298  1170  298  1168  298  1170  295  1171  296  439  1030  444  1023  441
1023  1167  300  1171  295  1171  296  441  1024  443  1023  444  1025  443  1023  443  1024  6600
316  1171  296  1169  298  1170  297  1170  295  1172  295  1172  295  446  1026  442  1023  445
1022  1170  298  1170  297  1170  297  443  1023  444  1023  443  1028  443  1023  445  1024  6596
320  1168  299  1167  301  1167  298  1173  295  1171  295  1172  295  444  1026  445  1023  442
1023  1171  296  1170  296  1173  294  443  1024  444  1024  440  1030  441  1023  444  1023  6600
320  1170  298  1171  296  1170  298  1173  295  1172  296  1173  296  442  1029  445
```

Create a text file to control this device in RFXmng:

```
0
7
281
1169
300
1169
298
1170
298
1168
298
1170
295
1171
296
439
1030
444
1023
441
1023
1167
300
1171
295
1171
296
441
1024
443
1023
444
1025
443
1023
443
1024
6600
```

17. RFXtrx433XL - P1 smart meter connection

The RFXtrx433XL can be connected to the Dutch P1 smart meter with the DSMR P1 option board with RJ11 cable or DIY connection.

The connection can be tested in RFXmngn.

Select the correct parameters and click Set Async port.

Important: the P1 connection must be present!

Chime	Fan	Curtain	Blinds1	RFY	Security1	Camera	Remote	Tstat1	Tstat2	Tstat3	Tstat4	Radiator1	Security2	Async
Command		Receive P1		Transmit Async Port command										
Baudrate		115200												
Bits		8												
Parity		No												
Stopbits		1												
Polarity		Inverted												

Select the correct parameters for your smart meter:

Meter Brand	DSMR version	ID	Baudrate	Bits	Parity
Iskra ME382, MT382	2.2	/ISK5	9600	7	E
Iskra AM550	5.0	/ISK5	115200	8	N
Kaifa E0003,E0025,MA105,MA304	4.0	/KFM5	115200	8	N
Kamstrup 162,351,382	2.2	/KMP5	9600	7	E
Landis+Gyr E350 ZCF100,ZCF110,ZFF100,ZMF100	4.0	/XMX5LG	115200	8	N
Sagemcom XT210	4.0		115200	8	N


The smart meter connector type is RJ12. The Metering System holds a female connector, the customer can plug in a standard RJ12 or RJ11 plug.

RJ12 is a 6P6C (6 positions, 6 contacts)

RJ11 is a 6P4C (6 positions, 4 contacts) This one can be used to connect the RFXtrx433XL.


Pin #	Signal name	Description
1	+ 5V power	Power supply (not used by the RFXtrx433XL)
2	RTS	Request to Send
3	GND	Data GND
4	NC	Not connected
5	RxD	Data output to the RFXtrx433XL
6	GND power	Power GND (not used by the RFXtrx433XL)

RJ12 and RJ11 connections:

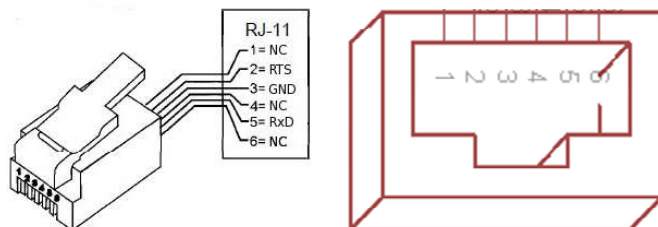


17.1. DIY P1 connection for RFXtrx433XL batch 3618 and 4018

1. Open the enclosure by removing the 4 screws.
2. Connect a 4k7 resistor between 3V3 and RxD.
3. Connect the RJ11 cable to the RFXtrx433XL PCB RFXtrx V5.0:
RJ11-2 to RTS
RJ11-3 to GND
RJ11-4 not used
RJ11-5 to RxD
4. Cut a few plastics from the upper side of the enclosure using a Stanley knife.
5. Cut also at the same position a few plastics from the bottom part.
6. Close the enclosure. First turn the screw left until you hear/feel a soft click, now turn the screw right and fix the screw (not too tight).

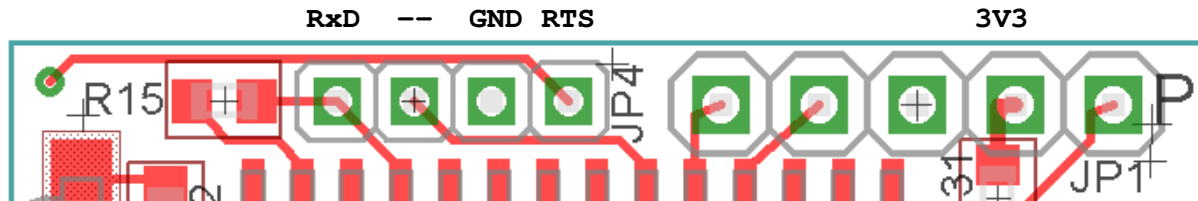



17.2. DIY P1 connection for RFXtrx433XL batch 4918 and later

1. Open the enclosure by removing the 4 screws.
2. Connect a 3k3 resistor between 3V3 and RxD.
3. Connect the RJ11 cable to the RFXtrx433XL PCB RFXtrx V5.1:
RJ11-2 to RTS
RJ11-3 to GND
RJ11-4 not used
RJ11-5 to RxD
4. Cut a few plastics from the upper side of the enclosure using a Stanley knife.
5. Cut also at the same position a few plastics from the bottom part.
6. Close the enclosure. First turn the screw left until you hear/feel a soft click, now turn the screw right and fix the screw (not too tight)

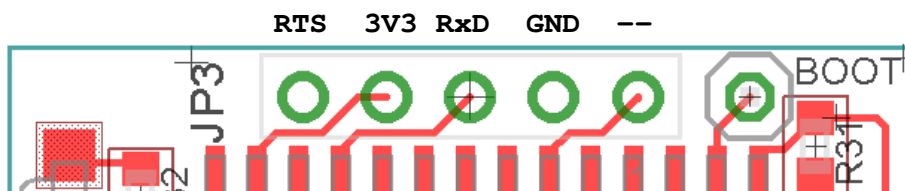

17.3. P1 option PCB Type 1 for RFXtrx433XL batch 3618 and 4018

1. Open the enclosure by removing the 4 screws.
2. Solder the 5 pins of the P1 PCB to the RFXtrx433XL PCB RFXtrx V5.0.
First solder 1 pin and check if the connector is fully on the RFXtrx433XL PCB.
Then solder the remaining 4 pins.
3. Cut a few plastics from the upper side of the enclosure for the cable using a Stanley knife.
4. Cut also at the same position a few plastics from the bottom part.
5. Close the enclosure. First turn the screw counter clockwise until you hear/feel a soft click, now turn the screw clockwise and fix the screw (not too tight).

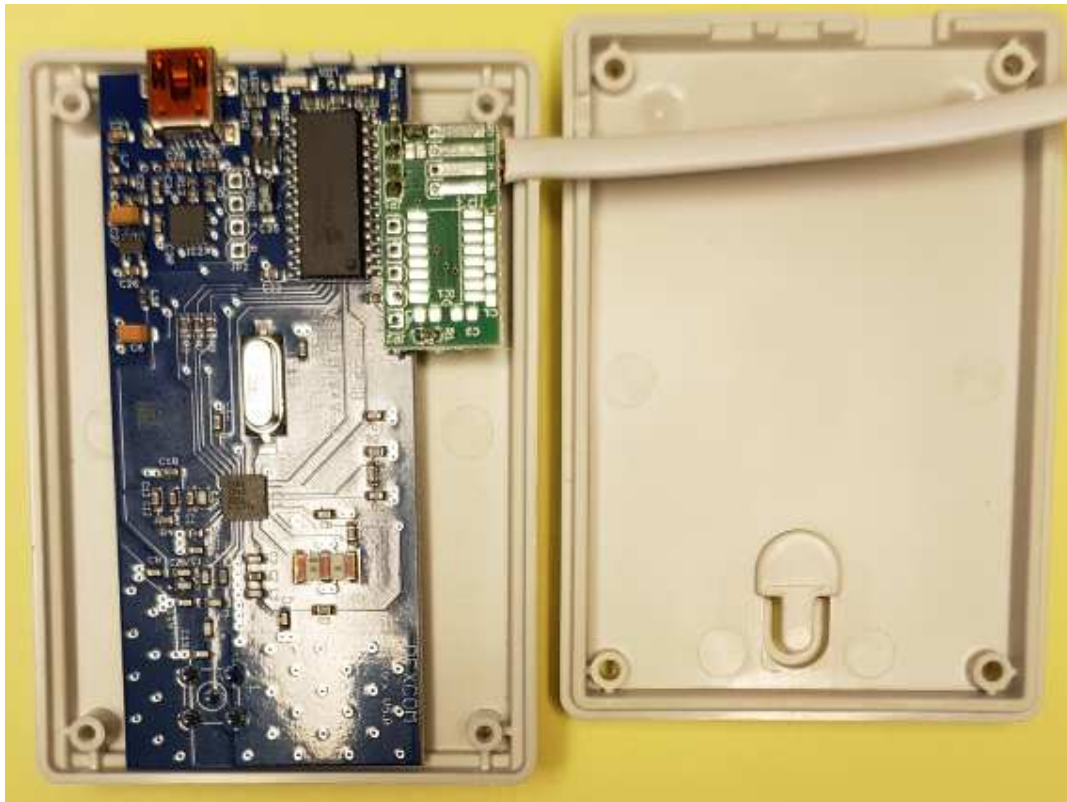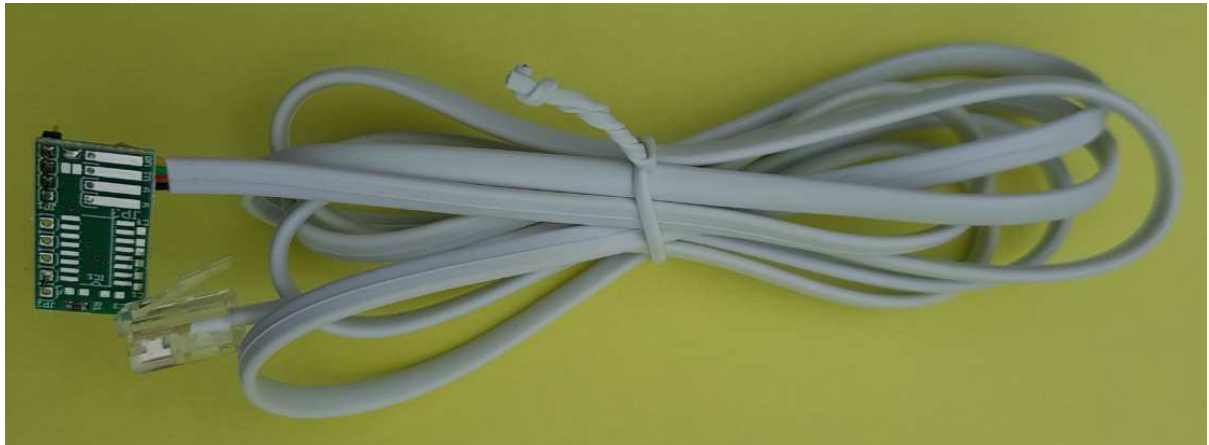

17.4. P1 option PCB Type 2 for RFXtrx433XL batch 4918 and later

1. Open the enclosure by removing the 4 screws.
2. Press the 5 pins of the P1 PCB into the RFXtrx433XL PCB RFXtrx V5.1.
Use a wrench to push the connector into the PCB until the black parts of the Press-Fit connector is on the RFXtrx PCB.
3. Cut a few plastics from the upper side of the enclosure for the cable using a Stanley knife.
4. Cut also at the same position a few plastics from the bottom part.
5. Close the enclosure. First turn the screw counter clockwise until you hear/feel a soft click, now turn the screw clockwise and fix the screw (not too tight)



18. RFXtrx433XL - Teleinfo connection

The RFXtrx433XL can be connected to the French smart meter and needs a Teleinfo interface. At the moment we only supply the Teleinfo interface option only for the RFXtrx version 5.1 (this is on the PCB) which is delivered starting batch 4918 and the later batches xx19 (xx=01 to 52). The batch number is on the label on the backside of the enclosure.

This option cannot be added in the RFXtrx433XL batch 3618 or 4018!!

The connection can be tested in RFXmngr.

Select the correct parameters and click "Transmit Async Port command".

Important: the Teleinfo connection must be present!

The setting is 1200, 7, Even, 1 and Normal polarity for the "historique" meter

The setting is 9600, 7, Even, 1 and Normal polarity for the new Linky meter

Fan	Hunter	Blinds1	RFY	Security1	Tstat1	Tstat2	Tstat3	Tstat4	Radiator1	Security2	Async
Command	Receive Teleinfo										
Baudrate	9600										
Bits	7										
Parity	Even										
Stopbits	1										
Polarity	Normal										

Transmit Async Port command

18.1. Teleinfo option PCB for RFXtrx433XL batch 4918 and later



1. Open the enclosure by removing the 4 screws.
2. Press the 5 pins of the P1 PCB into the RFXtrx433XL PCB RFXtrx V5.1.
Use a wrench to push the connector into the PCB until the black part of the Press-Fit connector is on the RFXtrx PCB.
3. Cut a few plastics from the upper side (only the raised edge) of the enclosure for the cable, using a Stanley knife.
4. Cut also at the same position a few plastics from the raised edge of the bottom part.
5. Close the enclosure. First turn the screw counterclockwise until you hear/feel a soft click, now turn the screw clockwise and fix the screw (not too tight)

19. RFXtrx433XL - Connection points for a serial interface


This connection can be used for a serial connection with the RFXtrx433XL instead of the USB interface.

The serial interface is using logic level of 5V maximum.

WARNING: Do NOT connect a RS232 interface that operates at +/-12Volts!!

Important: warranty is lost if this modification is used.

- Cut the PCB trace between the connection point R and the FT230X pin 15.
- Connect the serial interface to GND, T and R. Be sure to use a 3V3 or 5V logic level!
- The +5V can be used to power and external interface if required. In this case the RFXtrx433E must be powered by a 5V power supply connected to the USB interface. The +5V can also be an input for powering the RFXtrx433XL. Do not exceed +5V or the RFXtrx433XL will be destroyed.
- The serial interface is using 38400,N,8,1
- Be sure not to use a serial device that produces RF noise at 433MHz. A bad example of such a device is the USR-TCP232 LAN device.

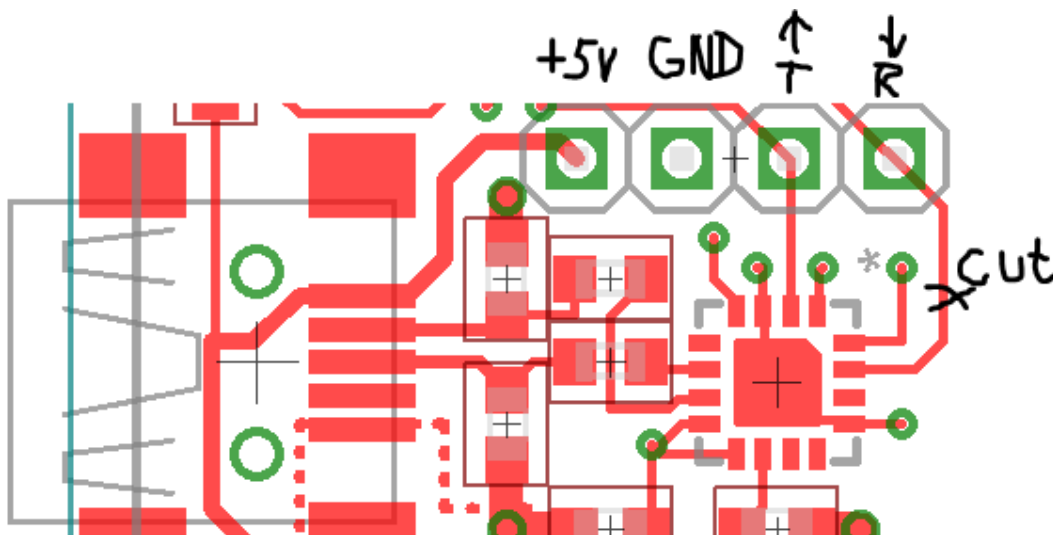


20. Recover from interrupted or wrong flash.


The RFXtrx can become in a loop after an interrupted flash or if you have flashed a wrong firmware. In this case the red LED stays on and no communication is possible.

1. Disconnect the USB,
2. Make a temporary connection (no soldering required) on the backside of the PCB as indicated below by the yellow connection,
3. Connect the USB,
4. Disconnect the temporary connection,
5. Start RFXflash and update the firmware.


RFXtrx433XL V5.1

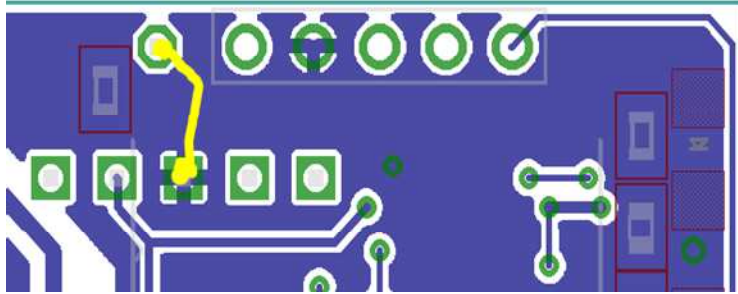


RFXtrx433XL V5.0

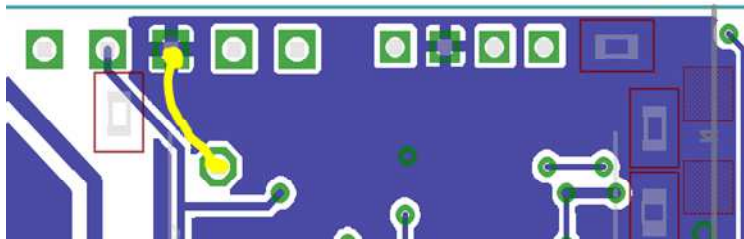


RFXtrx433E

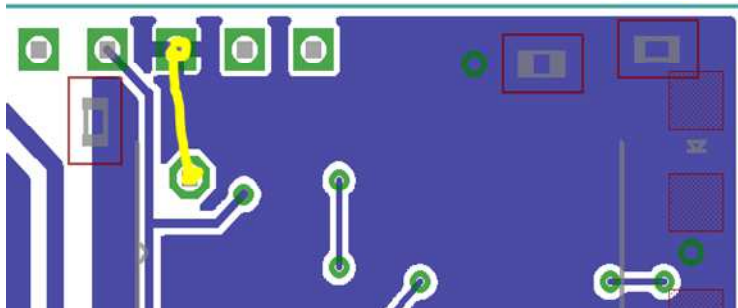


RFXtrx433

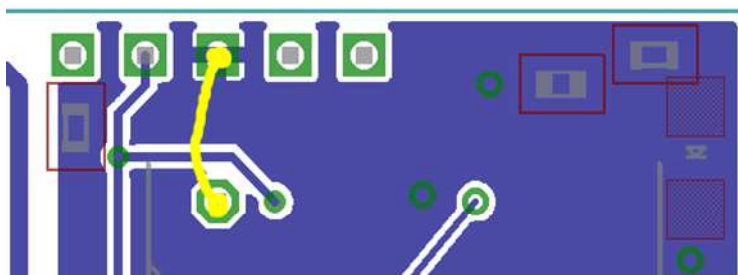


RFXtrx868X RFXtrxX V1.0 USB FT232

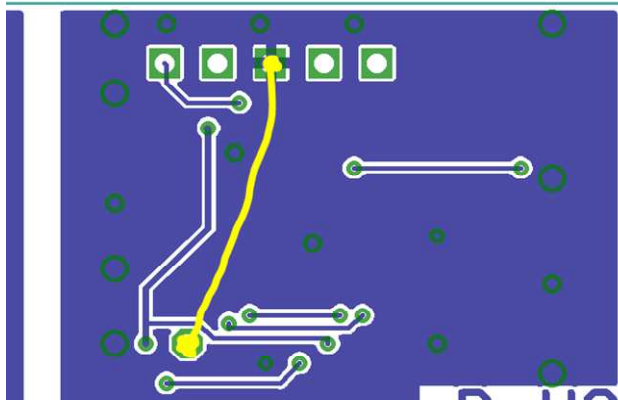

RFXtrx868X RFXtrxX V1.0 USB MCP2200

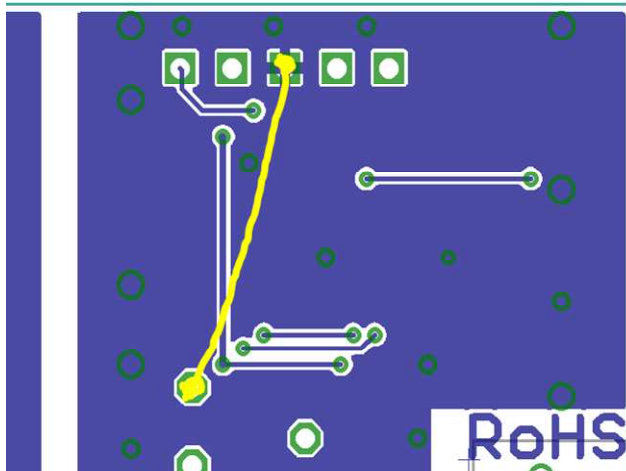

RFXtrx868XL RFXtrx V6.1 USB FT230QX

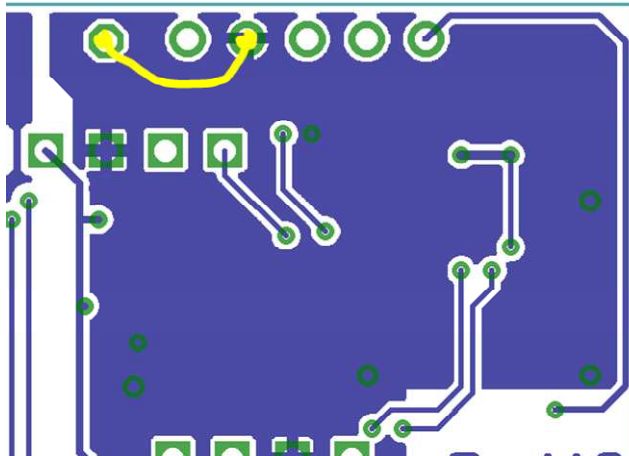

21. FAQ

21.1. Receive has stopped suddenly but transmit works.

Most probably a sensor is transmitting constantly. This could be for example an X10 MS13 motion sensor or weather sensor with almost empty battery. Or an outside weather sensor filled with water. Or a remote with a button pressed.

Test the RFXtrx with a remote or sensor on another location (> 1km away) using RFXmng on a Windows system or laptop.

21.2. Can I increase the receive/transmit range of the RFXtrx?

First check chapter 2.5 for the best place for the RFXtrx antenna.

The switch board is not the best place for the RFXtrx because of all metal objects that will absorb or reflect the RF signals.

It is also advised to place the RFXtrx far away from PC's, routers, Raspberry PI ... because of the RF noise those products produce, and this will reduce the receive range very much.

You can connect another 50ohm 70cm/433MHz antenna with more gain.

For example, <http://www.ebay.com/itm/290979680030>

Install this antenna on a metal plate of at least 30 cm for optimum result.

21.3. The RFXtrx USB connection disconnects sometimes.

This happens mostly on Raspberry PI with a low-quality power supply. Solution is to use a powered USB hub with a good quality power supply.

It can also happen if the USB cable is running along a power cable or a power device is switched on that produces a high-power spike like a fluorescent tube. Solution is to separate the USB cable from all other cables and/or use a powered USB hub with a good quality power supply.

21.4. I have a 433.92MHz sensor/remote but this device is not received.

Besides the frequency the used protocol and modulation type is also important.

See chapter 2 for the list of supported devices.

21.5. The wall plug is switched by the remote, the remote is received but the RFXtrx does not switch the module.

The remote transmits several protocols. The protocol used by the wall plug is not received by the RFXtrx but some other protocols are received.

Solution:

For the HomeEasy EU- HE8xx series: reset the module to remove all paired remotes and pair the module with the RFXtrx433E and one of remote codes that is received.

For IT modules FA500/PROmax: Pair the RFXtrx433E with the module using an IT device and select a random ID. The received remote code can be used to know if the module is switched by the remote.

22. EC Declaration of Conformity

EC Declaration of Conformity

RFXCOM declares that the product:

RFXtrx

Brand: RFXCOM Type: RFXtrx433, RFXtrx433E, RFXtrx433XL

conforms with the essential requirements and other relevant provisions of the following directives and complies with the following standards applied:

R&TTE Directive 99/5/EC	EN 300 220-1 V2.4.1 (2012-05)
	EN 300 220-2 V2.4.1 (2012-05)

Low-voltage Directive 2006/95/EC	IEC 60950-1 (2005-12)
----------------------------------	-----------------------

EMC Directive 2004/108/EC	EN 301 489-1 V1.9.2 (2011-09)
	EN 301 489-3 V1.4.1 (2002-08)

23. Warning:

- RF signals are possible disturbed, and it has not been justified for this equipment at uses in circumstances where life-threatening or dangerous situations are possible.
- RFXCOM HARDWARE AND SOFTWARE IS NOT INTENDED FOR USE IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL SYSTEMS, LIFE SUPPORT MACHINES OR OTHER EQUIPMENT IN WHICH THE FAILURE OF THE SOFTWARE COULD LEAD TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE.

24. License

- You are allowed to use RFXCOM software, protocols and Written Materials with RFXCOM hardware only.
- All copyright and other proprietary notices associated with RFXCOM software, protocols and Written Materials shall be visible to all users.
- You may not sell, distribute, loan, rent, lease, license, sublicense or otherwise assign or transfer RFXCOM software or RFXtrx protocols or Written Materials unless expressly authorized in writing by RFXCOM.
- You may not use any RFXCOM device, software or protocol as part of an exclusive or patented product without the express prior written permission of RFXCOM.
- You may not alter, modify, adapt or create derivative works based on any part of RFXCOM software or protocols or Written Materials in any way, including translating, reverse engineering, disassembling or decompiling the software.

25. Copyright notice

- All RFXCOM hardware, software, protocols and Written Materials are protected by copyright laws, and may not be reproduced, republished, distributed, transmitted, displayed, broadcast or otherwise exploited in any manner without the express prior written permission of RFXCOM.
- Netherlands Copyright and international treaty provisions protect the SOFTWARE, HARDWARE, RFXtrx protocols and Written Materials and shall be subject to the exclusive jurisdiction of the Netherlands Courts
- RFXCOM reserves all rights not expressly granted herein.

26. Revision history

- Version 0.0 – August 18, 2011
 - Initial version.
- Version 1.0 – October 30, 2011
 - RFXflash under Mono added.
- Version 2.0 – December 30, 2011
 - Updated for the production version with FTDI USB chip
- Version 2.1 – January 18, 2012
 - Link for ACM to serial port added in Linux instruction.
 - EC Declaration of Conformity added
- Version 2.2 – February 8, 2012
 - Protocols overview added
 - Screen dumps updated
- Version 2.3 – February 16, 2012
 - Novatys planned
- Version 2.4 – February 25, 2012
 - General information updated
- Version 2.5 – March 1, 2012
 - Chapter added how to run RFXmngn or RFXflash on Linux.
- Version 2.6 – March 14, 2012
 - Code tables added
 - Cresta, UPM added
- Version 2.7 – March 15, 2012
 - Flash procedure updated
- Version 2.8 – March 31, 2012
 - Phenix table added
- Version 2.9 – March 31, 2012
 - AB400 and Phenix address extended
- Version 2.10 – April 16, 2012
 - Linux USB - tty configuration updated
- Version 2.11 – May 14, 2012
 - List of supported protocols updated.
- Version 2.12 – June 8, 2012
 - Chapter added how to run RFXmngn or RFXflash on Mac OS
- Version 2.13 – July 15, 2012
 - List of supported protocols updated
- Version 2.14 – August 4, 2012
 - List of enabled protocols influence added
 - RFXtrx315 added
- Version 2.15 – August 18, 2012
 - Enabled protocols table changed
- Version 2.16 – August 26, 2012
 - Rubicson stektermometer added
 - ATI Remote Wonder II added
- Version 2.17 – August 28, 2012
 - Table “sensitivity influenced” updated
- Version 2.18 – September 18, 2012
 - Chapter 2.3 updated: BlindsT0 disables all other protocols
- Version 2.19 – September 25, 2012
 - RFXFlash version required changed to 4.0.0.0
- Version 2.20 – September 28, 2012
 - RF range reduction guide added
- Version 2.21 – October 18, 2012
 - BlindsT2 and BlindsT3 added
- Version 2.22 – October 24, 2012
 - Sartano added
- Version 2.23 – October 31, 2012

Sensitivity table updated

Version 2.24 – November 7, 2012
Protocol table extended with the protocols to enable for receive

Version 2.25 – November 14, 2012
HE105 switch settings added

Version 2.26 – November 28, 2012
undec on explained

Version 2.27 – December 4, 2012
Use of Lighting4 commands for undec ARC
Brennenstuhl added

Version 2.28 – December 18, 2012
Receiver tab removed from RFXmngnr

Version 2.29 – December 27, 2012
Lighting4 receive added

Version 2.30 – January 1, 2013
Raex motor added

Version 3.00 – January 4, 2013
RFXtrx433 Type1/Type2 firmware added

Version 3.01 – February 4, 2013
Supported protocols list updated

Version 4.00 – February 21, 2013
Chapter 8 - Lighting4 screen updated for RFXmngnr 11.0.0.0
Known Lighting4 chapter added

Version 4.01 – March 13, 2013
Receive of LaCrosse sometimes influenced by enabled Hideki

Version 4.02 – June 8, 2013
MDREMOTE LED dimmer added
Conrad RSL2 added
Energenie added

Version 4.03 – September 27, 2013
How to find the MDREMOTE ID (chapter 7.6)
WS1200 added
Byron SX Chime added

Version 4.04 – November 15, 2013
Maverick ET-732 added
Alecto SA30 added
Oregon EW109 added
Revolt added

Version 4.05 – December 5, 2013
Blyss command explanation added.
Lighting4 - Mercury added
Lighting5 – dx.com RGB LED controller added

Version 4.06 – December 27, 2013
Chapter 2.2 updated

Version 4.07 – February 10, 2014
Chapter 7.8 added: how to find the dx.com RGB LED strip driver ID

Version 4.08 – March 20, 2014
ARC and Oregon3.0 updated in table 2.4.
Energenie 5-gang 429.950 added

Version 4.09 – April 4, 2014
BlindsT6 - DC106, YOODA, Röhrmotor24 RMF added

Version 4.10 – April 7, 2014
BlindsT7 - Forest added

Version 4.11 – April 28, 2014
RGB LED – clarified AD is LightwaveRF

Version 4.12 – May 21, 2014
Kambrook RF3672 added
RFY protocol added

- Somfy programming instructions added
- Supported protocol list RFXtrx433 updated.
- Protocol list by function added
- Version 4.13 – May 31, 2014
 - Opus TX300/Imagintronix Soil sensor added
- Version 4.14 – June 18, 2014
 - Prega sensor added
 - Conrad 34911 Lighting4 coding added
- Version 4.15 – June 25, 2014
 - Kambrook, Rubicson, Viking supported in ext firmware
 - Number of RFY remotes increased from 16 to 30
- Version 4.16 – June 29, 2014
 - RFXmngr cannot be used on Linux
- Version 4.17 – July 3, 2014
 - CoCo GDR2 added
- Version 4.18 – July 14, 2014
 - Opus TX300 link added
- Version 4.19 – July 25, 2014
 - Aoke relay added
- Version 4.20 – August 25, 2014
 - Enabling protocols clarified.
- Version 4.21 – September 5, 2014
 - Meade sensors added
 - Oregon BTHGN129 sensor added
- Version 4.22 – September 18, 2014
 - Eurodomest added (NL - Action)
 - Byron MP001 added
 - WT0122 added
 - Procedures added to find the Eurodomest and TRC02 ver2 ID
- Version 4.23 – September 24, 2014
 - Proove TSS330 fridge/freezer sensor added
- Version 4.24 – October 9, 2014
 - BlindsT0 added in ext firmware
 - Alecto WS1700 and compatibles added
- Version 4.25 – December 13, 2014
 - Smartwares radiator valve added
 - Proove TSS320 sensor added
- Version 4.26 – January 2, 2015
 - SelectPlus200689101 White Chime (Action NL) added
- Version 4.27 – January 6, 2015
 - SelectPlus200689103 Black Chime (Action NL) added
- Version 4.28 – January 7, 2015
 - Proove outdoor sensors 311346 & 311501 added
 - Etekcitec Wireless Remote Control Outlet Switch (US)
- Version 5.00 – January 10, 2015
 - Copyright message updated
 - License chapter added
 - RFXmngr information updated
- Version 5.01 – February 27, 2015
 - Chapter 2.5 Lighting4 receive is reduced with HomeEasy EU enabled.
 - Chamberlain tubular motor added
 - Sunperly blind motors added
 - DEA Systems receivers added
 - Envivo ENV-1348 chime added
 - Alecto WS4500 added

Version 5.02 – March 18, 2015
 1byOne Easy Chime added
 BTX blind motors added
 Dolat DLM-1 blind motors added
 OTIO added

Version 5.03 – March 19, 2015
 TFA 30.3160 pool sensor added

Version 5.04 – April 14, 2015
 Chapter 4 updated with restrictions on Lighting4
 Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood added
 Maplin N78KA added

Version 5.05 – May 2, 2015
 Dooya blind motors added
 Louvolite one touch motorised blinds added
 Alecto WS3500 added

Version 5.06 – May 4, 2015
 Current dx.com TRC02 LED drivers have a different protocol and are not supported.

Version 5.07 – June 1, 2015
 WH2 temperature humidity sensor added
 RGB LED controller <http://www.ebay.com/itm/191481664563> (maybe dx.com 227892)

Version 5.08 – July 31, 2015
 Oregon MSR939 added
 ESMO blind motors added
 Brel blind motors added
 Blinds T6 type motors now also supported in Ext firmware
 Supported devices table 2.2.2. updated

Version 5.09 – Aug 12, 2015
 Luxaflex blind motors added

Version 5.10 – Aug 17, 2015
 JVS screen motors added
 Livolo NL link added

Version 5.11 – Aug 31, 2015
 ASA motors added

Version 5.12– Sept 14, 2015
 Home Confort added

Version 5.13– Oct 2, 2015
 Oregon GR101 received in Type1 firmware
 Conrad RSL sensors received in Type2 firmware

Version 5.14– Oct 7, 2015
 Quotidom blinds motor added

Version 5.15– Nov 06, 2015
 Banggood temp-hum sensor added
 Legrand CAD radio added

Version 5.16– Nov 26, 2015
 Proluxx codes corrected

Version 5.17– Dec 24, 2015
 RFXflash procedure updated
 Rubicson pool sensor 48.019 added
 Inovalley SM80 plant sensor added
 Lucci Air fan added

Version 5.18– Jan 1, 2016
 1byone Drive Way alarm added

Version 5.19– Feb 6, 2016
 Avantek added
 ASP blinds motors BlindsT11 added
 Maverick ET-733 added
 Profiles PAC-326R Belcanto chime added
 HQ COCO-20 added

Version 5.20– Feb 18, 2016
BlindsT12 Confexx CNF24-2435 added
IT FA500, PROmax... added
Ext2 firmware overview added in chapter 2
Auriol Z31055B-TX added
Chuango, Eminent security sensors added

Version 5.21– May 6, 2016
Cartelectronic TIC and Encoder added
FAQ chapter added

Version 5.22– May 14, 2016
Corrected: TX95 is using the Rubicson protocol
MDRemote V108 added

Version 5.23– June 10, 2016
Motolux blinds motor added
Auriol H13726, Hama EWS1500, Meteoscan W155/W160, Ventus WS155 added
FAQ updated

Version 5.24– June 21, 2016
Seav TXS4 added

Version 5.25– Aug 6, 2016
ORNO added

Version 5.26– Sept 6, 2016
Added: How to find the SEAV TXS4 ID

Version 5.27– Oct 09, 2016
Westinghouse fan 7226640 added
THN129 added
TFA 30.3056 pool sensor added

Version 5.28– Oct 19, 2016
MCZ pellet stove added
Alecto SA33 added
Smartwares RM174RF smoke detector added

Version 5.29– Nov 27, 2016
SilverCrest 91089 added
Mertik G6R-H4S added
Marquant 943134
MCZ pellet stove instructions added

Version 5.30– Dec 6, 2016
Kerui security sensors added
Screenline added

Version 5.31– Dec 15, 2016
Flamingo smartwares SF501 added

Version 5.32– Jan 02, 2017
Kangtai, Cotech added

Version 5.33– Feb 01, 2017
Cranenbroek added
Unitec 48110 EIM 826 added
SilverCrest 60494 added
WSD10 added

Version 5.34– March 08, 2017
Housegard Origo smoke detector added
Pearl NC-7159 added
Ambient Weather & Froggit F007TH added
TFA 30.3208.02 sensor added

Version 5.35– March 20, 2017
Silverline Premium motor added
Dooya DT82 instructions added

Version 5.36— April 25, 2017
Quigg added
OTIO EHS5050 added
Blyss temperature/humidity sensor 630467 added
Outlook Motion Blinds added
Version 5.37— May 5, 2017
Cartelectronic TIC in Type2 and Ext2
Version 5.38— May 22, 2017
BBSB not in Ext2
Profile Qnect added
Version 5.39— July 28, 2017
Banggood DANIU sensor added
Somfy usage remarks added
Brennenstuhl RC2044 added
Version 5.40— Sept 18, 2017
Blyss temp/hum added in Ext
Cartelectronic Linky added
Version 5.41— Sept 24, 2017
Sonoff RF added
Rollertrol G series added
Version 5.42— Oct 26, 2017
Dooya DC2770, DT52E added
Version 5.43— Nov 1, 2017
A-OK AC127, AC129 added
Version 5.44— Nov 11, 2017
Digoo DG-R8H added
Version 5.45— Nov 23, 2017
SilverCrest 284705 added
Version 5.46— March 2, 2018
Nexa NBA-001 added
Kimex projection screen added
Version 5.47— March 13, 2018
Lighting4 PT2262 EV1527 info added
Tellus Thermo/Hygro sensors 313159 and 313160
Version 5.48— July 28, 2018
Supported Protocols list updated
FunkBus (Gira, Jung, Berker, Insta) added
Nobily rolladenmotor added
LucciAir DC added
Version 5.49— Aug 18, 2018
Supported Protocols list updated
Version 5.50— Sep 26, 2018
Cotech Ekstra temperaturgiver/hygrometer added
Supported Protocols list updated for RFXtrx433XL
Version 5.51— Sep 28, 2018
RFXtrx433XL Dutch P1 smart meter connection added
Version 5.52— Oct 3, 2018
RFXtrx433XL serial connection added
Version 5.53— Oct 12, 2018
P1 smart meter connection updated
RFXtrx433XL French Teleinfo connection added
Mertik G6R-H3T1 added
Version 5.54— Oct 16, 2018
Teleinfo interface circuit added
Version 5.55— Oct 17, 2018
Firmware recovery procedure added

Version 5.56– Nov 3, 2018
P1 and Teleinfo resistor R15 change added

Version 5.57– Nov 30, 2018
P1 and Teleinfo updated

Version 5.58– Dec 2, 2018
How to move RFY devices to another RFXtrx433E or RFXtrx433XL

Version 5.59– Jan 5, 2019
Funkbus transmit only
Motiva blinds added
Envivo chime added in XL
Byron BY chime added

Version 5.60– April 03, 2019
P1 DIY cable connection added
P1 option boards added
RFXtrx868 supported protocols updated
Alfawise and dBell added
inblindz added
Homeconfort, Siemens SF01 receive added
Bresser Temeo Hygro added
Digoo door/window sensor added
Monaco wireless doorbell added
CasaFan Eco Aviatos RH787T added
Motostar blinds added

Version 5.61– April 25, 2019
Procedure how to move RFY devices updated.
Teleinfo option PCB added.

Version 5.62– May 04, 2019
RM174RF, RM175RF added in Pro firmware

Version 5.63– May 07, 2019
Omnia Go blinds added
Teleinfo setting – Inverted polarity

Version 5.64– July 23, 2019
Faher blinds motor added
Profitec KD310T added
Kerui siren added
RM174RF, RM175RF transmit added

Version 5.65– Aug 12, 2019
Recover RFXtrx868 added
Hunter fan added
Novy extractor hood added

Version 5.65a– Aug 12, 2019
MCZ receive updated in 2.2.2.

Version 5.66– Sept 30, 2019
Smartwares RM174RF/RM175RF receive only
Teleinfo interface updated

Version 5.67– Jan 11, 2020
Simu Hz indicated (BHz is not supported)
Dooya Bi-Directional is not supported!
SAS SA-200 added
RAIN9 - TFA 30.3233.01 rain sensor added
Gaposa QCTR5

Version 5.67a– Feb 5, 2020
The new TFA rain sensor 30.3233 only supported in Pro2 and ProXL1

Version 5.68– Feb 26, 2020
Cherubini added